



ENGINE

CUMMINS QSB4.5

For 62Z7B/67Z7B/67TM7B

Serial No. 26651667 ~



CUMMINS QSB4.5

(62Z7B/67Z7B/67TM7B)

93307-00660



CONTENTS I

• Before Use

• CONTENTS II

• PARTS NAME INDEX

• 67Z7B

• ENGINE

Air Heater Starting Aid	1
Agency Approval	3
Rear Gear Housing	5
Cylinder Block Plumbing	7
Cylinder Block	9
Crankshaft	11
Valve Tappets	15
Crankcase Breather	17
Crankcase Breather Plumbing	19
Crankcase Breather Mounting	21
Vibration Damper	23
Drain Location	25
Rear Gear Train Mounting	27
Thermostat	29
Alternator	31
Alternator Mounting	33
Exhaust Recirculation	35
Exhaust Recirculation Air Plumbing	37
Exhaust Recirculation Water Plumbing	39
Fan Drive	41
Fan Drive Mounting	43
Fuel Drain Plumbing	45
Fuel Filter Location	47
Fuel Filter Plumbing	49
Fuel Filter Mounting	51
Flywheel Housing	53
Fuel Inlet Fitting	55
Fuel Pump	57
Fuel System Accessories	59

Fuel Plumbing	61
Flywheel Mounting	63
Flywheel	65
Front Gear Cover	67
Cabin Heater Plumbing	69
Auxiliary Pump Mounting	71
Auxiliary Cooling Plumbing	73
Air Intake Connection	75
Air Intake Manifold	77
Air Transfer Connection	79
Lifting Arrangement	81
Lifting Bracket Mounting	83
Oil Fill Labeling	85
Engine Oil Cooler	87
Full Flow Oil Filter	89
Oil Level Gauge	91
Lubricating Oil Pump	93
Oil Fill Arrangement	95
Hand Hole Cover	97
Oil Pan	99
Accessory Drive Pulley	101
Aftertreatment Device	103
Engine Control Module	107
Connecting Rod And Piston	109
Camshaft	111
Cylinder Head	113
Injector	115
Injector Plumbing	117
Turbocharger	119
Rocker Lever	121
Engine Coolant Vent	123
Oil Level Sensor	125
Fluid Level Sensor	127
Heat Shield	129
Starting Motor Mounting	131
Paint	133
Starting Motor	135
Exhaust Manifold	137
Torque Converter Oil Cooler	139

Turbocharger Plumbing	141
Valve Cover Arrangement	143
Water Inlet Connection	145
Water Outlet Connection	147
Belt Tensioner	149
Water Pump	151
Water Pump Drive	153
Electronic Control Module Wiring Harness	155
Exhaust Outlet Connection	157

•PARTS NO INDEX

MEMO

Before Use

FOREWORD

- ◎ According to KCM's continuous effort to improve the product quality, descriptions in the Parts Catalog may be slightly different from your machine. If any questionable points are found, feel free to contact your nearest KCM dealer.
- ◎ For the engine parts, please refer to the parts catalog of diesel engine issued separately.

1. HOW TO ORDER PARTS

When ordering parts, please specify the following items.

- (1) Model/type
- (2) Product Identification Number
- (3) Part No.
- (4) Part Name
- (5) Q'ty
- (6) Purchaser's Name and Address

2. HOW TO USE THIS PARTS CATALOG

PART NAME: When the part is used as an inner part of an assembly part, the mark "I" is shown in front of the part name.

Q'TY: Indicates the number of the part used per machine. The quantity of an inner part is the number of the inner part necessary to organize one assembly part.

SYMBOLS USED IN THIS BOOK:

The symbols shown in the service code and interchangeability columns are used to indicate the following information.

- W: Requires additional processing at the job site. Ask your nearest KCM dealer.
- H: Indicate a precise part. Ask your nearest KCM dealer for its repair.
- D: Impossible to replace as a single part. Replace the part in an assembly unit.
- K: Contained in the service part kit.
- R: Indicate that the quantity of the part like shims differs depending on the machine serial No.
- S: To be supplied as repair or service parts.
- Z: Engine related parts.
- OS: Over-sized parts
- US: Undersized parts
(Part with mark "OS, or US" is described in the next column under the standard size part column.)
- #: Indicates newly added parts to the equipment or component.
- Y: Interchangeable part without any constraint.

- I: Used to indicate the part No. and quantity of the part to be used for the part concerned in the replacement part column. However, the part concerned is not used for the part shown with mark I.
- T: Becomes interchangeable when combined.
- P: Indicate the part prohibited to use. Use the part shown in the replacement part column.

SERIAL No.: The serial number corresponds to the last six-digit figure of the PIN (Product Identification Number) on the name-plate.

- D: Represents the date of modification.
(Example: D03/09: New modification part has been applied to the products manufactured in and after Sept 2003.)
- H: Indicates the component manufacturing No.
- F: Indicates the front attachment manufacturing No

REPLACEABLE PART:

Indicates the part No. and quantity per machine of the replacement part.

NOTE: When the part with mark Y, I, or P shown in the interchangeability column is ordered, the part shown in the replacement part column may be automatically supplied instead of the ordered part.

MEMO

Chassis No. and Manufacturer's Serial No.

1. The chassis No. and the manufacturer's serial No. marked on the machine are indicated in this parts catalog as follows:

Serial No. shown in parts catalog	Chassis No.	Manufacturer's serial No.
5001	65C5-5001	65C5-5001

It is recommended to write the model name, the chassis No., the manufacturer's serial No. and the date of delivery of your machine in the table below to speed parts orders in the future.

Model name	
Chassis No.	
Manufacturer's serial No.	
Date of delivery	

MEMO

Avant utilisation

AVANT-PROPOS

- © Dû aux efforts continus d'KCM en vue d'améliorer la qualité de ses produits, les descriptions dans le catalogue de pièces détachées peuvent différer légèrement de celle de votre chine. Si vous doutez de certains détails, n'hésitez pas à contacter votre concessionnaire KCM le plus proche.
- © En ce qui concerne les pièces détachées du moteur, veuillez consulter le catalogue de pièces détachées spécifique au moteur diesel.

- 1 COMMENT COMMANDER DES PIÈCES ETACHÉES
- Lors de votre commande, veuillez spécifier les éléments suivants comme démontré dans l'exemple ci-dessous.
- (1) Modèle/type
(2) Produit Numéro d'identification
(3) N° de référence
(4) Dénomination du composant
(5) Quantité
(6) Nom et adresse de l'acheteur

2 COMMENT UTILISER CE CATALOGUE

PART NAME: Lorsqu'une pièce fait partie intégrante d'un assemblage, le signe « . » apparaît avant la dénomination du composant.

Q'TY: Indique le nombre de pièces utilisées par machine. La quantité des pièces internes correspond au nombre de pièces internes nécessaires pour la composition d'un assemblage.

SYMBOLES UTILISÉS DANS CE CATALOGUE :

Les symboles figurant dans le code de service et dans les colonnes d'interchangeabilité correspondent aux indications suivantes.

- W:** Exige un traitement complémentaire sur le site. Renseignez-vous auprès de votre concessionnaire KCM le plus proche.
- H:** Indique une pièce en particulier. Demandez à votre concessionnaire KCM le plus proche de la réparer.
- D:** Pièce impossible à remplacer séparément. Remplacez la pièce dans son ensemble.
- K:** Pièce contenue dans le kit de réparation.
- R:** Indique que la quantité de pièces telles que des cales d'épaisseur diffère selon le numéro de série de la machine.
- S:** Pièce disponible comme pièce de réparation ou d'entretien.
- Z:** Pièces faisant partie du moteur.
- OS:** Pièces aux cotes de réparation supérieures

US: Pièces aux cotes de réparation (sous-dimensionnées) (les pièces marquées de « OS » ou « US » sont décrites dans la colonne suivante, dans la colonne de pièce standard.)

#: Indique des pièces récemment ajoutées à la machine ou au composant.

Y: Pièce interchangeable sans autre condition.

I: Utilisé pour indiquer le numéro de référence et la quantité de la pièce à utiliser pour le composant concerné dans la colonne de pièce de rechange. Toutefois, la pièce concernée n'est pas utilisée pour le composant indiqué par I.

T: Devient interchangeable lorsqu'il est utilisé en combinaison avec d'autres pièces.

P: Indique une pièce à ne pas utiliser. Utilisez la pièce indiquée dans la colonne de pièce de rechange.

SERIAL NO.(N°de SERIE):

Le numéro de série correspond aux six derniers chiffres du Numéro d'identification (PIN) de la plaque d'identification

D: Représente la date de modification. (Exemple : D03/09 : la nouvelle pièce modifiée a été montée sur les machines fabriquées durant et après septembre 2003).

H: Indique le numéro de fabrication du composant.

F: Indique le numéro de fabrication de l'équipement avant.

REPLACEABLE PART:

Indique le numéro de référence et la quantité par machine de la pièce de rechange.

Note: Lorsque vous commandez une pièce comportant un Y, I, ou P dans la colonne d'interchangeabilité, la pièce indiquée dans la colonne de pièce de rechange peut être livrée automatiquement à la place de la pièce commandée.

MEMO

N°. de châssis et n°. de série du fabricant

1. Les n° de châssis et n° de série du fabricant marqués sur la machine sont indiqués dans le catalogue des pièces

N° de série indiqué dans le catalogue de pièces	N° de châssis	N° de série du fabricant
5001	65C5-5001	65C5-5001

Il est conseillé d'écrire le nom de modèle, le n° de châssis, le n° de série du fabricant et la date de livraison de votre machine dans le tableau ci-dessous pour accélérer la commande des pièces à l'avenir.

Nom du modèle	
N° de châssis	
N° de série du fabricant	
Date de livraison	

MEMO

Antes de utilizar

PREFACIO

- © Debido al continuo esfuerzo de KCM por mejorar la calidad de sus productos, puede que las descripciones del "Parts Catalog" (Catálogo de piezas) no coincidan exactamente con su máquina. Si encuentra algún punto dudoso, no dude en ponerse en contacto con el distribuidor de productos de KCM más cercano.
- © En lo referente a las piezas del motor, consulte el catálogo de piezas del motor diesel que se publica por separado.

1. CÓMO SE PIDEN LAS PIEZAS

Para pedir piezas, especifique los siguientes elementos según se muestra en el siguiente ejemplo.

- (1) Modelo / tipo
- (2) Producto Número de identificación
- (3) Núm. Pieza
- (4) Núm. Pieza
- (5) Cant.
- (6) Nombre y dirección del comprador

2. CÓMO SE UTILIZA ESTE CATÁLOGO DE PIEZAS

PART NAME: Cuando se trata de una pieza interior de un montaje, la marca "-" aparece delante del nombre de la pieza.

Q'TY: Indica cuántas piezas de ese tipo lleva cada máquina. La cantidad indicada junto a una pieza interna indica cuántas piezas internas de ese tipo son necesarias para realizar un ensamblaje.

SÍMBOLOS UTILIZADOS EN ESTE LIBRO:

Los símbolos indicados en el código de mantenimiento y en las columnas de piezas intercambiables indican la siguiente información:

- W:** Requiere procesamiento adicional en el lugar en el que se realice el trabajo. Pregunte al distribuidor de productos KCM más cercano.
- H:** Indica una pieza precisa. Pregunte al distribuidor de productos de KCM más cercano por la reparación de la pieza.
- D:** No se puede cambiar sola, hay que cambiar también otras piezas. Cambie la pieza en un montaje.
- K:** Incluida en el kit de piezas de repuesto.
- R:** Indica que la cantidad de piezas, como las cuñas, depende del número de serie de la máquina.
- S:** Se suministra como pieza de reparación o de repuesto.
- Z:** Pieza relacionada con el motor.

OS: Piezas de tamaño grande

US: Pieza de tamaño reducido (Las piezas con las marcas "OS" o "US" están descritas en la siguiente columna bajo la columna de piezas de tamaño estándar.)

#: Indica una pieza recientemente añadida al equipo o componente.

Y: Pieza intercambiable sin ningún tipo de limitación.

I: Usada para indicar el número de la pieza y cuántas se van a utilizar para la pieza indicada en la columna de piezas de repuesto. Ahora bien, la pieza indicada en la columna de piezas de repuesto no se utiliza para la pieza que lleva la marca I.

T: Se convierte en intercambiable cuando se combina con otras.

P: Indica una pieza que no se puede usar. Use la pieza indicada en la columna de piezas de repuesto.

SERIAL NO.(Núm. SERIE):

El número de serie corresponde al último número de seis dígitos del NIP (Número de Identificación del Producto) que aparece en la placa de datos técnicos.

D: Representa la fecha de modificación. (Ejemplo: D03/09: En los productos fabricados desde septiembre de 2003 en adelante se ha incluido esta pieza recientemente modificada.

H: Indica el número de fabricación del componente.

F: Indica el número de fabricación del accesorio frontal.

REPLACEABLE PART:

Indica el número de la pieza y cuántas lleva cada máquina.

Nota: Cuando se hace un pedido de una pieza que lleva la marca Y, I o P en la columna de piezas intercambiables, se puede suministrar automáticamente la pieza indicada en la columna de piezas de repuesto en lugar de la pieza que se ha pedido.

MEMO

Nº de chasis y nº de serie del fabricante

1. El número de chasis y el número de serie del fabricante marcados en la máquina se indican en este catálogo de

Nº de serie mostrado en el catálogo de piezas	Nº de chasis	Nº de serie del fabricante
5001	65C5-5001	65C5-5001


Se recomienda escribir el nombre del modelo, el número de chasis, el número de serie del fabricante y la fecha de entrega de la máquina en la siguiente tabla para facilitar los futuros pedidos de piezas.

Nombre del modelo	
Nº de chasis	
Nº de serie del fabricante	
Fecha de entrega	

MEMO


CONTENTS II

 Air Heater Starting Aid

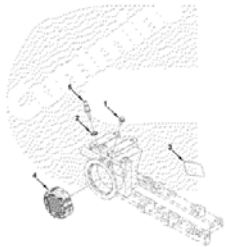


.....p.1

 Agency Approval

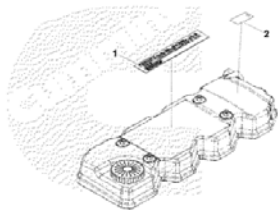


.....p.3

 Rear Gear Housing

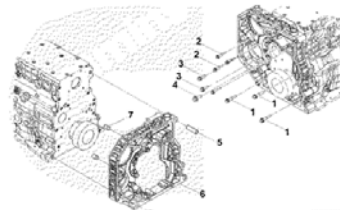


.....p.5

 Cylinder Block Plumbing

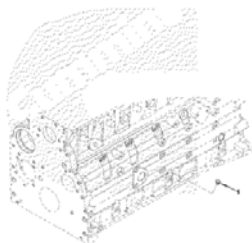


.....p.7

 Cylinder Block

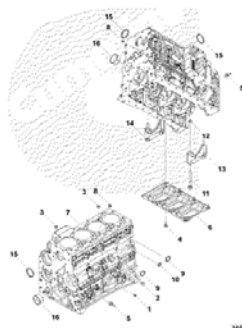


.....p.9

 Crankshaft

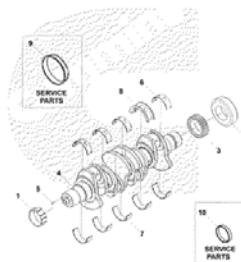


.....p.11

 Valve Tappets

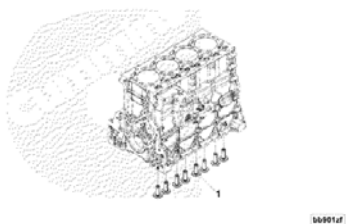


.....p.15

 Crankcase Breather

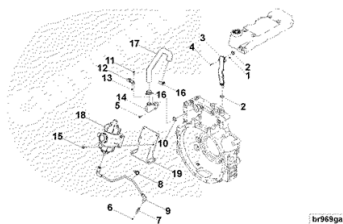


.....p.17

 Crankcase Breather Plumbing

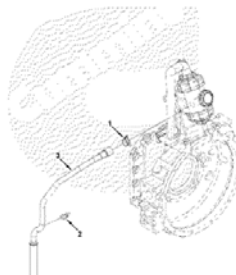

.....p.19

 Crankcase Breather Mounting

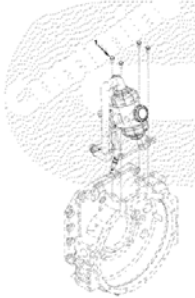


.....p.21

Vibration Damper




.....p.23

 Drain Location

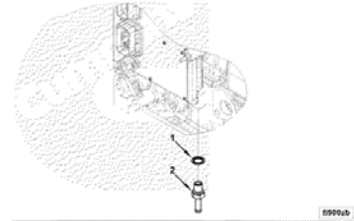


.....p.25

 Rear Gear Train Mounting

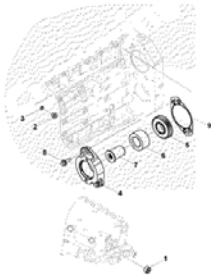


.....p.27

 Thermostat

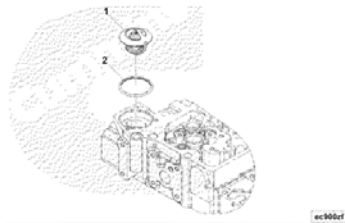


.....p.29

 Alternator

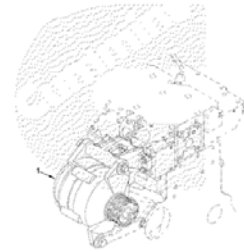


.....p.31

 Alternator Mounting

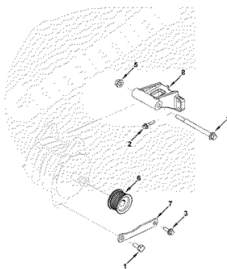


.....p.33

 Exhaust Recirculation

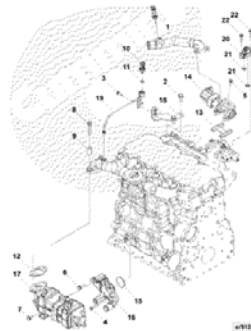


.....p.35

 Exhaust Recirculation Air Plumbing

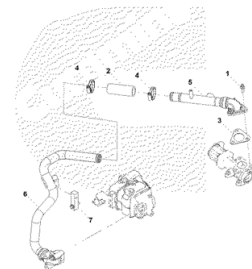


.....p.37

 Exhaust Recirculation Water Plumbing

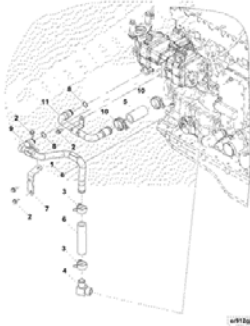


.....p.39

 Fan Drive

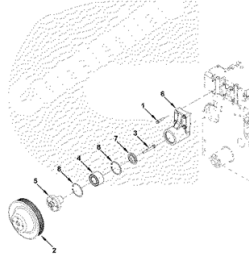

.....p.41

 
Fan Drive Mounting

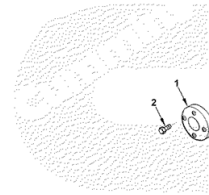

sp951gq


.....p.43

 Fuel Drain Plumbing

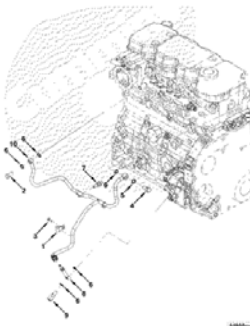


.....p.45

 Fuel Filter Location

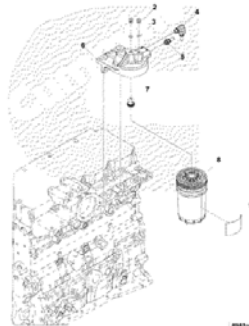


.....p.47

 Fuel Filter Plumbing

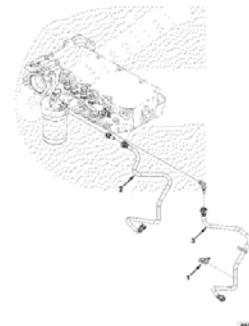

.....p.49

 Fuel Filter Mounting

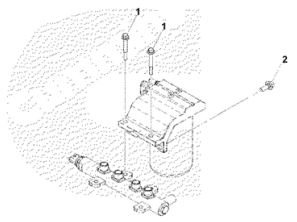

ms71gr

.....p.51

 
Flywheel Housing



ms71gr









.....p.53

Fuel Inlet Fitting

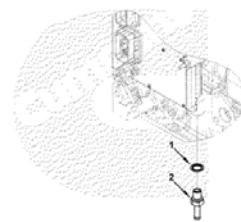


ms90ub

        .....p.55

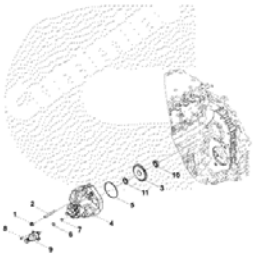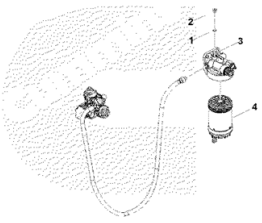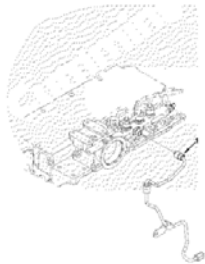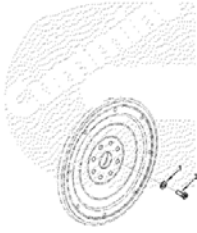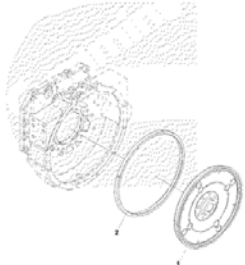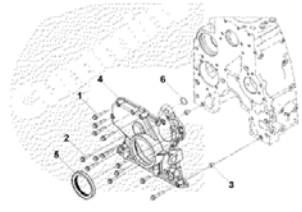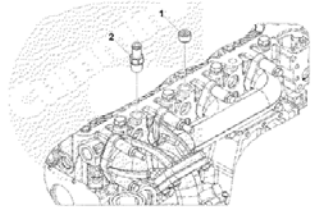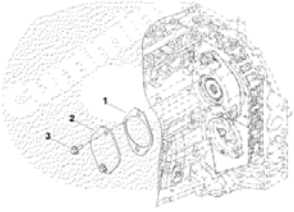
Fuel Pump  p.57	Fuel System Accessories  p.59	Fuel Plumbing  p.61
Flywheel Mounting  p.63	Flywheel  p.65	Front Gear Cover  p.67
Cabin Heater Plumbing  p.69	Auxiliary Pump Mounting  p.71	Auxiliary Cooling Plumbing  p.73

 Air Intake Connection

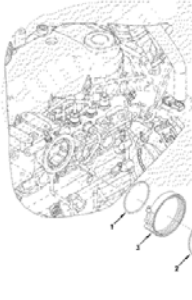


.....p.75

 Air Intake Manifold

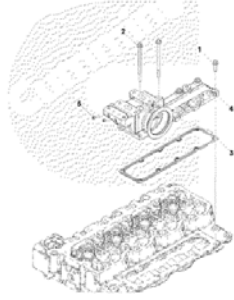


.....p.77

 Air Transfer Connection

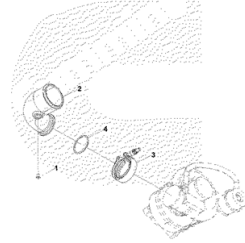

.....p.79

 Lifting Arrangement

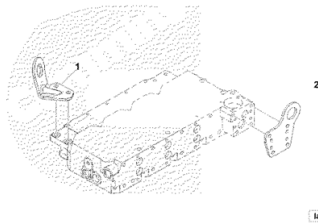


.....p.81

Lifting Bracket Mounting




.....p.83

 Oil Fill Labeling

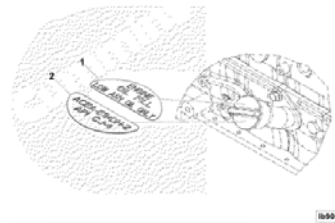


.....p.85

 Engine Oil Cooler

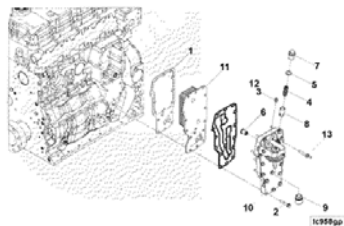


.....p.87

 Full Flow Oil Filter









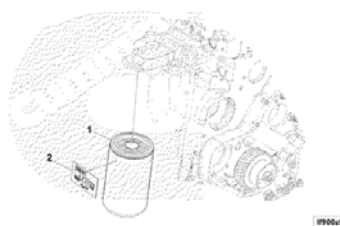


.....p.89

 
Oil Level Gauge

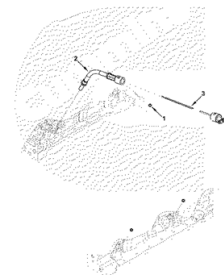

.....p.91

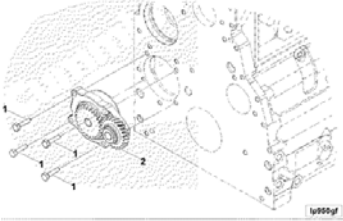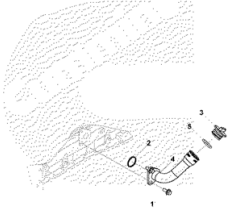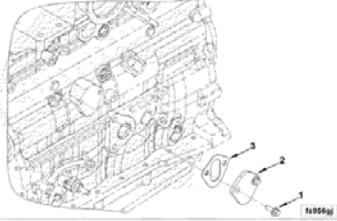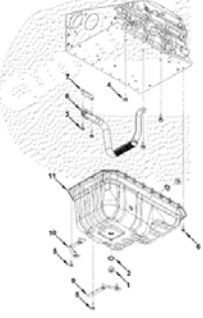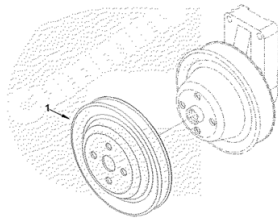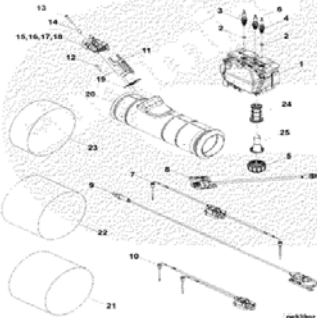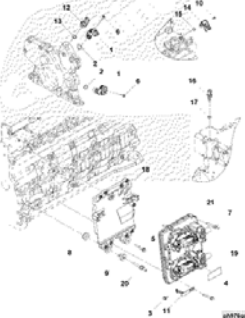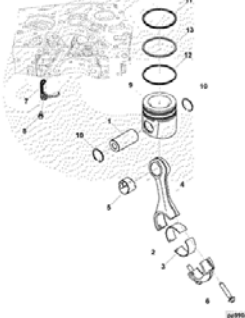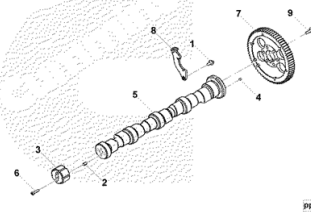         
Lubricating Oil Pump  p.93	Oil Fill Arrangement  p.95	Hand Hole Cover  p.97
Oil Pan  p.99	Accessory Drive Pulley  p.101	Aftertreatment Device  p.103
Engine Control Module  p.107	Connecting Rod And Piston  p.109	Camshaft  p.111

 Cylinder Head

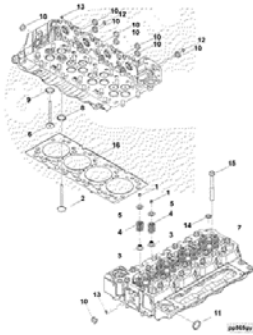


.....p.113

 Injector

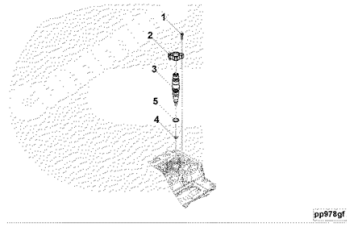


.....p.115

 Injector Plumbing

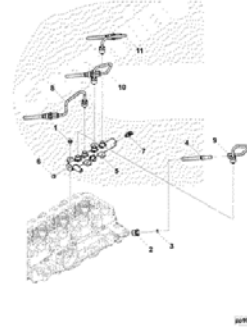


.....p.117

 Turbocharger

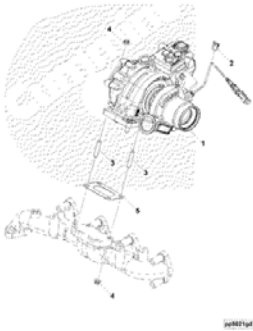


.....p.119

 Rocker Lever

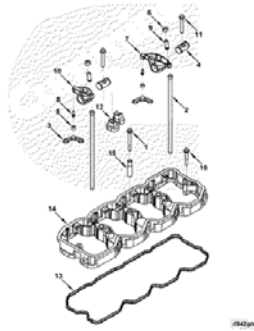


.....p.121

 Engine Coolant Vent

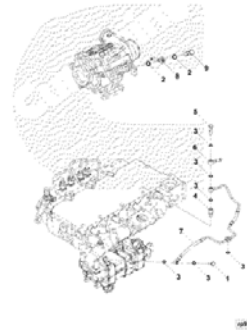


.....p.123

 Oil Level Sensor

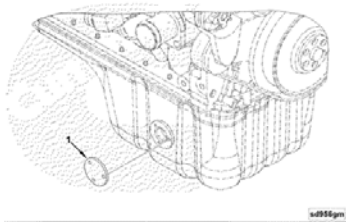


.....p.125

 Fluid Level Sensor

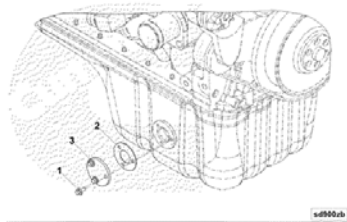


.....p.127

 Heat Shield

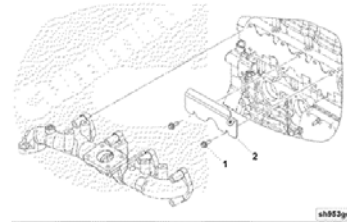

.....p.129

 
Starting Motor Mounting

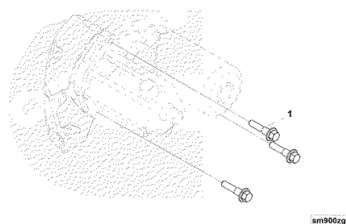

sm900zg

.....p.131

 
Paint

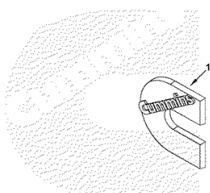

ss940gn

.....p.133

 
Starting Motor

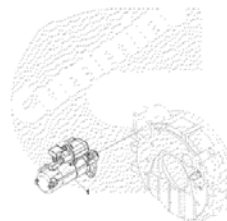

ss940gn

.....p.135

 
Exhaust Manifold

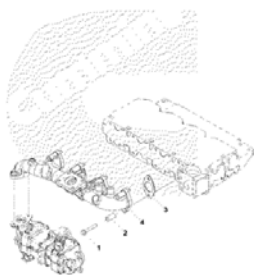

ss940gn

.....p.137

 
Torque Converter Oil Cooler

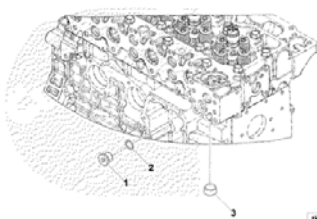

ss940gn

.....p.139

 
Turbocharger Plumbing

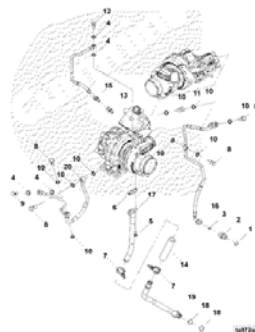

ss940gn

.....p.141

 
Valve Cover Arrangement

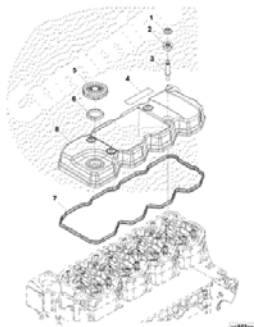

ss940gn

.....p.143

 
Water Inlet Connection

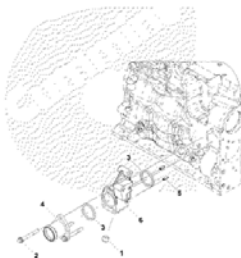

ss940gn






.....p.145

 Water Outlet Connection

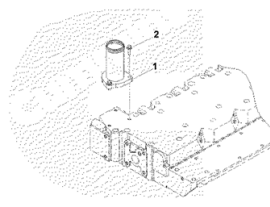

ss940gn

     .....p.147

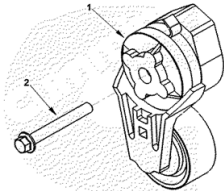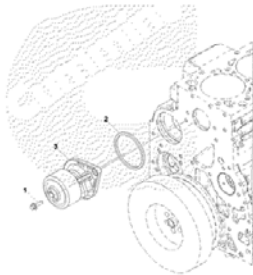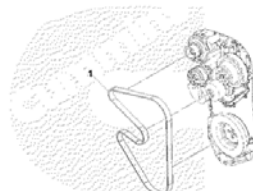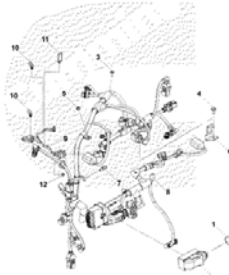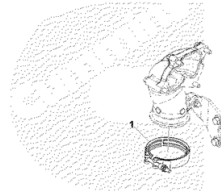Belt Tensioner  wp950zy p.149	Water Pump  wp950zy p.151	Water Pump Drive  wp950zy p.153
Electronic Control Module Wiring Harness  wp950zy p.155	Exhaust Outlet Connection  xx950gp p.157	

MEMO

PARTS NAME INDEX

PARTS NAME INDEX

	PART NAME	PAGE		PART NAME	PAGE
*	*EGR Module Suppor	36	E	Exhaust Manifold	138
A	Accessory Drive Co	28		Exhaust Manifold G	36,138
	Accessory Drive Ge	28		Exhaust Recirculat	36
	Accessory Drive Pu	102		Exhaust Valve	114
	Accessory Drive Sh	28		Exhaust Valve Kit	114
	Aftertreatment Dev	104		Expansion Plug	8,10,92,114
	Air Transfer Pipe	76,80	F	Fan Hub	42
	Air Transfer Tube	38		Fan Hub Retainer	42
	Alternator	32		Fan Pulley	42
	Alternator Brace	34		Fan Support	42
	Alternator Pulley	34		Female Connector	74,104
	Alternator Support	34		Filler Cap	96,104,144
B	Ball Bearing	42		Filler Cap Gasket	144
	Banjo Connector	124		Filter Head Adapte	88
	Banjo Connector Sc	46,110,124,142		Filter Head Gasket	88
	Belt Tensioner	150		Filter Kit	104
	Breather Adapter	18		Filter Screen	48,104
	Breather Element	18		Filter Support	104
	Breather Support	18		Flange Gasket	100
	Breather Tube	18,20		Flywheel	66
	Bushing	10,110		Flywheel Housing	54
C	Camshaft	112		Flywheel Ring Gear	66
	Camshaft Gear	112		Fracture Resistant	10,114
	Camshaft Thrust Su	112		Front Cover	68
	Check Valve	46		Fuel Drain Tube	46
	Clamping Plate	24,44,100		Fuel Filter	48,60
	Clip	46		Fuel Filter Head	48,60
	Compression Piston	110		Fuel Manifold	118
	Compression Spring	88		Fuel Pump	58
	Connecting Rod Bea	110		Fuel Pump Gear	58
	Connecting Rod Cap	110		Fuel Supply Tube	50,62
	Connection Gasket	36,38	G	Gear Housing	6
	Cooler Core	88		Ground Wire	108
	Cover Plate	54,72,98,126,128	H	Harness,Electronic	156
	Cover Plate Gasket	98,128		Heat Shield	104,130
	Cover Retainer	2		Heavy Hexagon Nut	122
	Crankcase Breather	18		Hexagon Flange Hea	2,6,10,18,22,24,28,34...
	Crankshaft Gear	12		Hexagon Flange Nut	34,40,58,144,156
	Crankshaft Pulley	24		Hexagon Head Cap S	34,42,64,94,104
	Crankshaft Seal Ki	54		Hose Clamp	40
	Cylinder Block	10		Hydraulic Pump Ada	28
	Cylinder Block Har	10		Hydraulic Pump Gas	72
	Cylinder Block Kit	10	I	Information Decal	4,48,86,90
	Cylinder Block Sti	10		Injector	116
	Cylinder Head	114		Injector Clamp	116
	Cylinder Head Gask	114		Injector Fuel Supp	118
D	Dataplate	4,108		Injector Fuel Supp	118
	Decomposition Reac	104		Injector Fuel Supp	118
	Differential Press	36		Injector Seal	116
	Dipstick	92		Instruction Tag	2
	Doser Injector	104		Intake Manifold Co	78
	Doser Injector Gua	104		Intake Manifold Co	78
	Doser Pump	104		Intake Valve	114
	Double End Plain S	58,120		Intake Valve Kit	114
E	Elbow Hose Couplin	74	K	Kit, Turbocharger	120
	Electrical Connect	156	L	Lubricating Oil Dr	18
	Electronic Control	108		Lubricating Oil Fi	90
	Electronic Control	108		Lubricating Oil Fi	88
	Electronic Fuel Co	58		Lubricating Oil Pu	94
	Engine Connecting	110	M	Main Bearing	12
	Engine Crankshaft	12		Main Bearing Cap	10
	Engine Lifting Bra	82		Main Bearing Set	12
	Engine Piston	110		Male Connector	104
	Engine Piston Kit	110		Male Union	142
	Exhaust Cooler Wat	40		Molded Hose	18
	Exhaust Cooler Wat	40		Mounting Spacer	36,104,138
	Exhaust Gas Recirc	36	N	Nameplate	134
	Exhaust Gas Recirc	36		Nitrogen Oxide Sen	104
	Exhaust Gas Recirc	36		Noise Isolator	144

PARTS NAME INDEX

	PART NAME	PAGE		PART NAME	PAGE
O	Oil Cooler Core Ga	88	T	Tube Brace	36,38,40
	Oil Drain Gasket	120,142		Tube Clamp	50
	Oil Filler Tube	96		Turbocharger	120
	Oil Gauge Tube	92		Turbocharger Coola	142
	Oil Pan	100		Turbocharger Coola	142
	Oil Piston Ring	110		Turbocharger Gaske	120
	Oil Seal	54,68		Turbocharger Gaske	120
	Oil Suction Connec	100		Turbocharger Oil D	142
	O-Ring Adapter	18		Turbocharger Oil D	142
	O-Ring Plug	54		Turbocharger Oil S	142
	O-ring Seal	104		Turbocharger Senso	120
O-Ring Seal	18,28,36,40,48,54,58...	Turbocharger Speed	120		
P	Pin Dowel	12,112	V	Twelve Point Cap S	132
	Pipe Plug	28,54,70,78,80,88,140,146		Twelve Point Nut	120
	Piston Cooling Noz	110		V Band Clamp	76,80,158
	Piston Pin	110		V Ribbed Belt	154
	Piston Ring Kit	110		Valve Collet	114
	Plain Adapter	142		Valve Cover	144
	Plain Adapter Elbo	40		Valve Cover Gasket	144
	Plain Hose	38,40,142		Valve Crosshead	122
	Plain Hose Couplin	26,56,70		Valve Insert	114
	Plain Pipe Couplin	124		Valve Spring	114
	Plain Washer	64		Valve Spring Retai	114
	Position Sensor	108	Valve Stem Seal	114	
	Pressure Regulator	88	Valve Tappet	16	
	Pressure Relief Va	88,118	Vent Tube	124	
	Pressure Sensing T	36	Vibration Isolator	108	
	Pressure Sensor	18,36,118	W	Water Inlet Connec	146
	Pressure Switch	108		Water Outlet Conne	148
	Pressure Temperatu	108		Water Pump	152
	Push Rod	122		Water Pump Kit	152
	Quick Disconnect C	48,142		Wear Sleeve Kit Fr	13
	R	Rectangular Ring S		36,96,146,152	Wear Sleeve Kit Re
Regular Hexagon Nu		58		Wire Retaining Cli	18,20,120,156
Retaining Ring		42,110		Wire Tie Clamp	156
Ring Dowel		6,10,68,112		Wiring Brace	156
Rocker Lever		122		Wiring Harness	156
Rocker Lever Adjus		122			
Rocker Lever Assem		122			
Rocker Lever Ball		122			
Rocker Lever Housi		122			
Rocker Lever Housi		122			
Rocker Lever Shaft		122			
Rocker Lever Socke		122			
Rocker Lever Suppo		122			
Roll Pin		146			
Roller Bearing		28			
Round Head Cap Scr		18,104			
Rr Crankseal Serv		54			
S		Safety Decal	144		
		Sealing Washer	26,46,56,100,120,124,142		
		Service Tool	105		
		Shaft Collar	12		
	Sleeve	122			
	Socket Head Cap Sc	58,108,112			
	Speed Indicator Ri	112			
	Spring Hose Clamp	18,20,38,120,142			
	Spring Washer	58			
	Starting Aid	2			
	Starting Motor	136			
	Stud	144			
	Studded Flange Cap	2,10,38,46,88,108,156			
	T	Temperature Sensor	36,104,108		
Thermostat		30			
Thermostat Seal		30			
Threaded Insert		6			
Threaded Plug		10,28,48,54,60,88,100,140			
Thrust Bearing		12,13			
Tube . Lubrication		18			

 
Air Heater Starting Aid エアヒーター始動補助装置

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

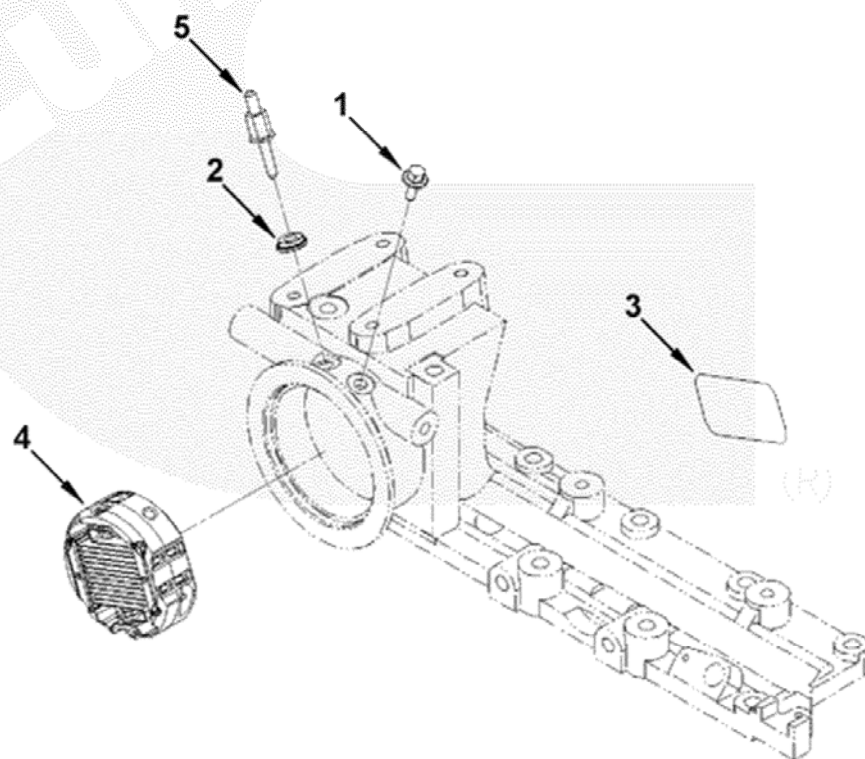

ah956gl

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

- 2 -

 
Agency Approval 認証銘板

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

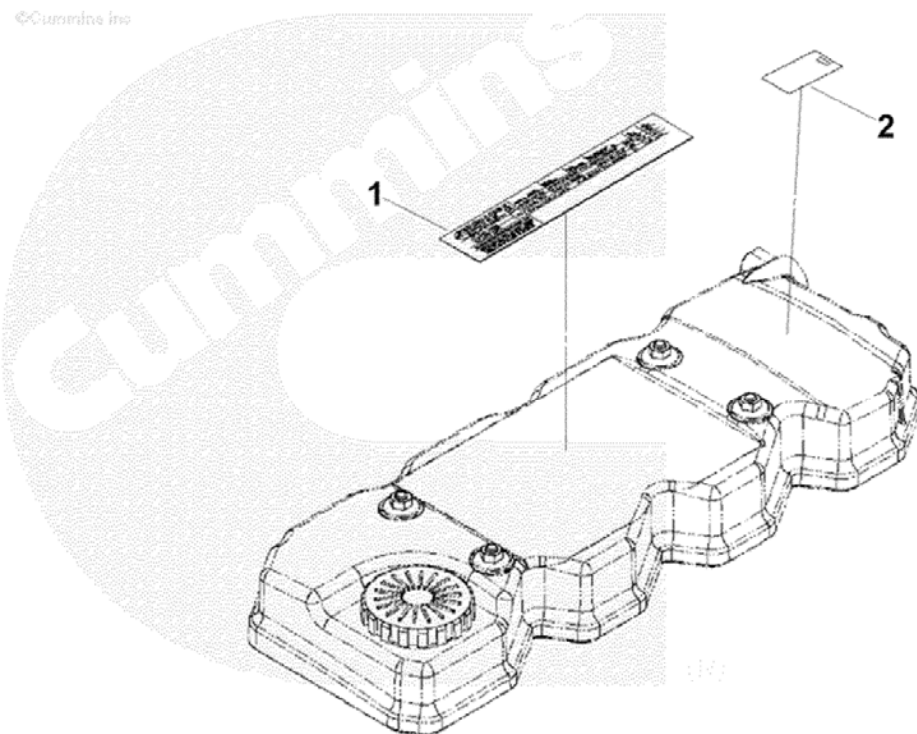

ap956gz

認証銘板

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Rear Gear Housing ギヤハウジング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

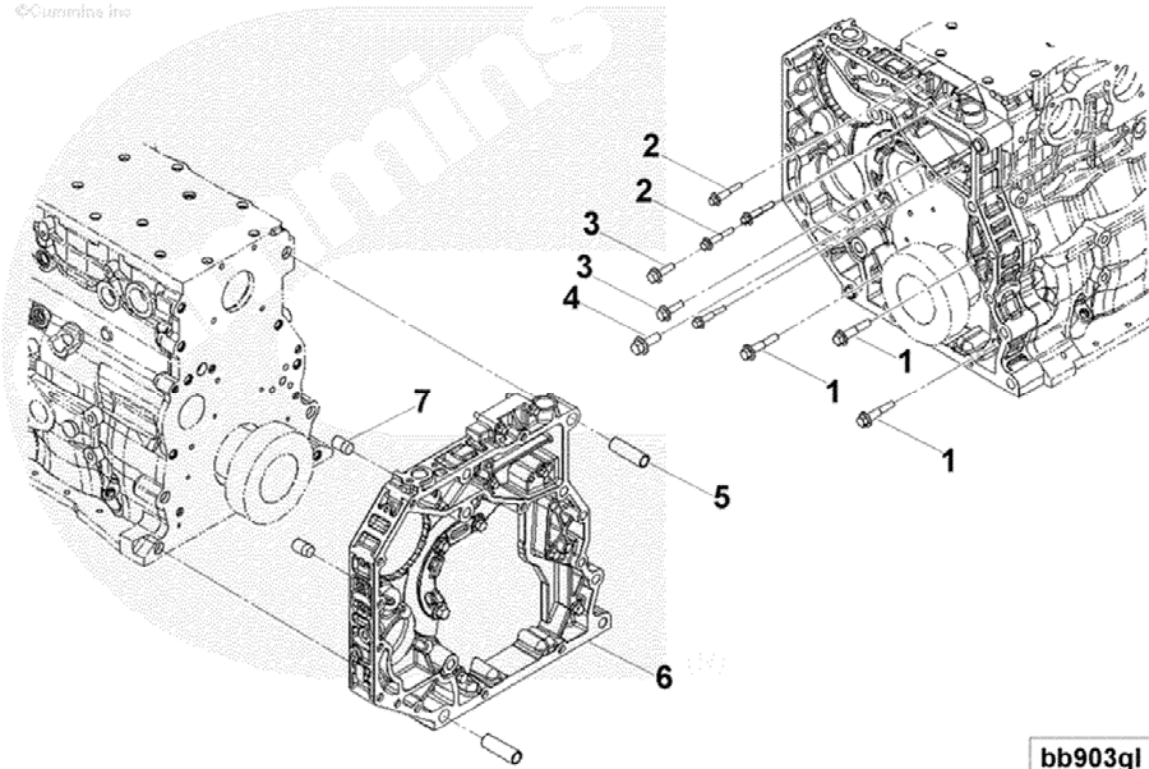

bb903gl

ギヤハウジング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Cylinder Block Plumbing シリンダブロック配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

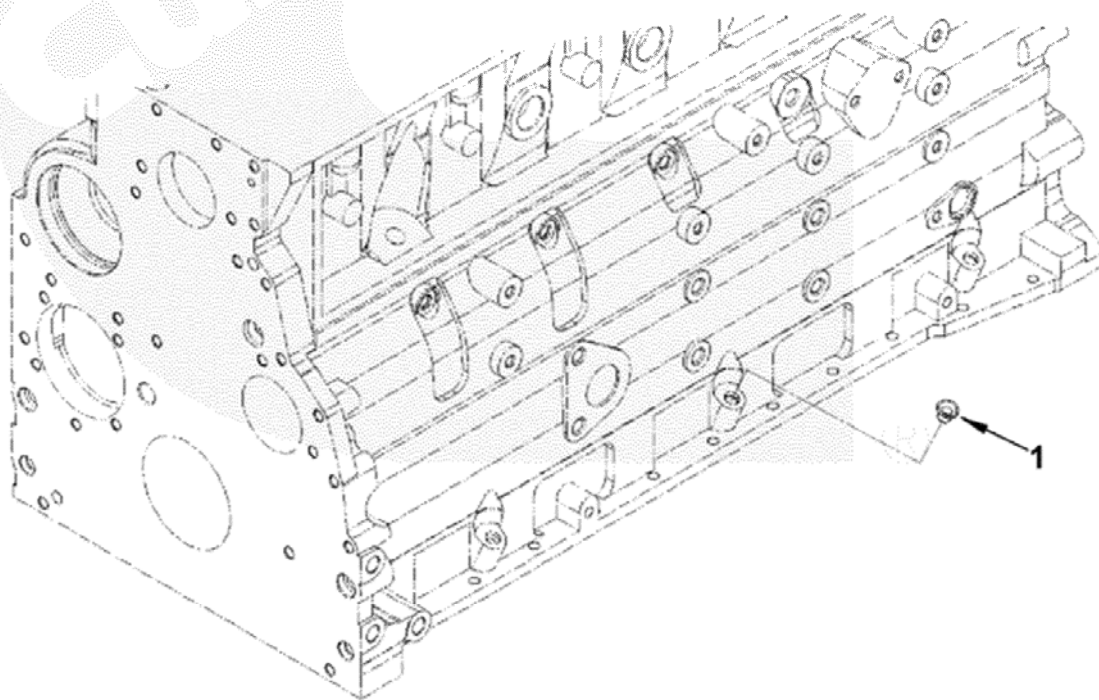

Ig900gk

Cylinder Block Plumbing

シリンダブロック配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Cylinder Block シリンダーブロック

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

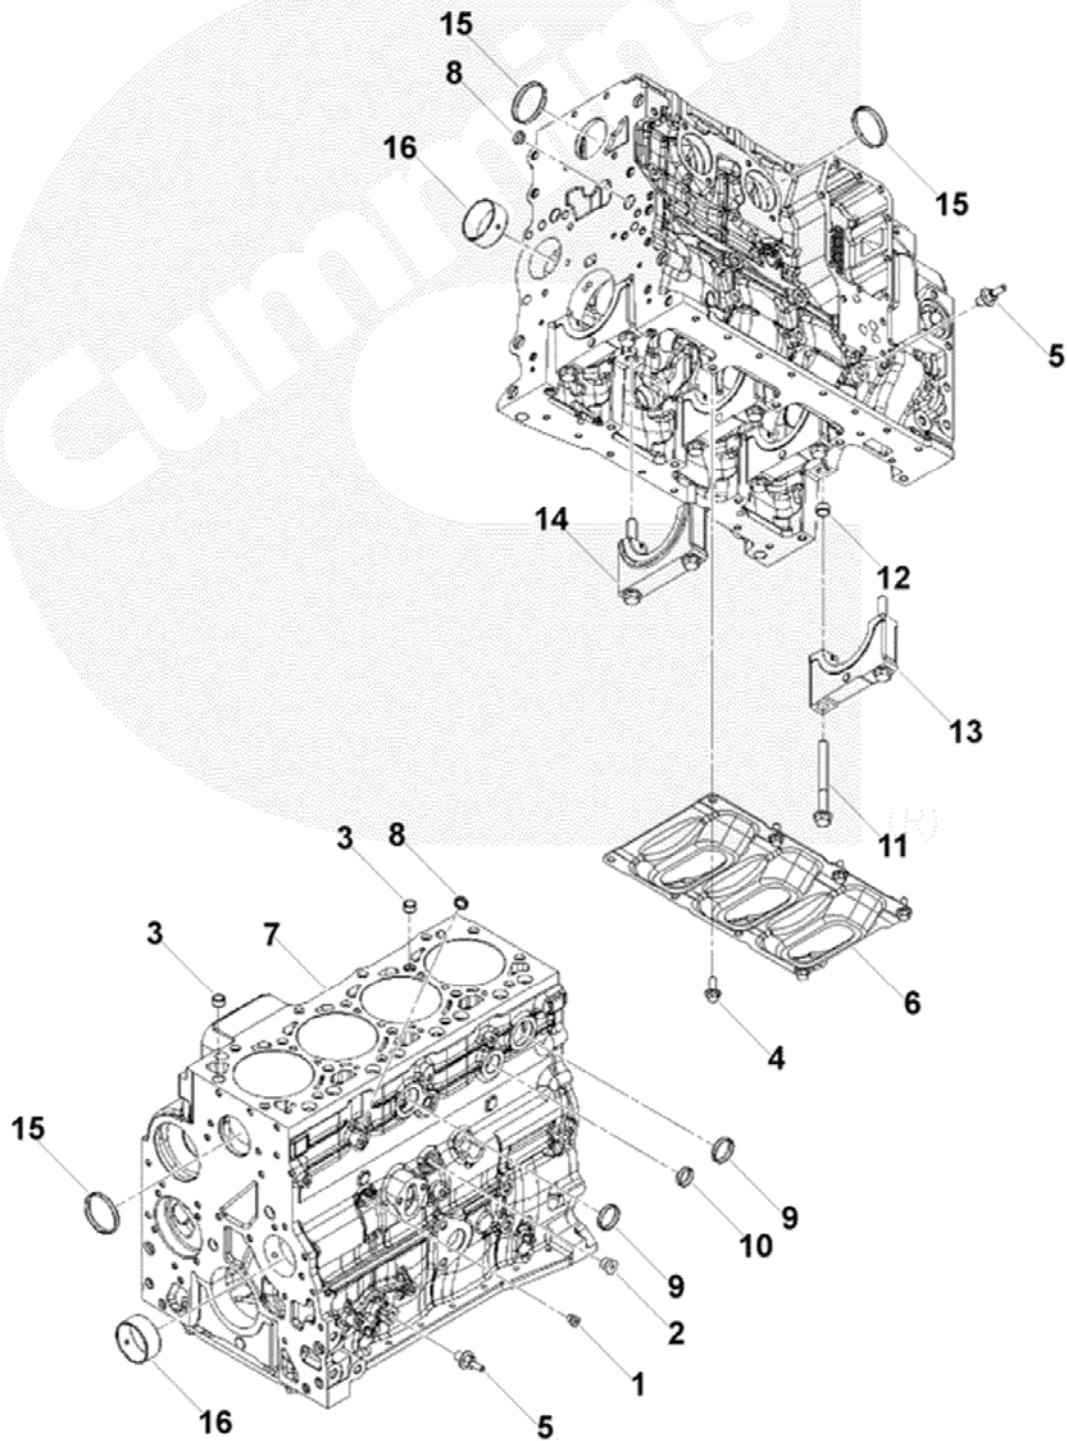

bb921gj

Cylinder Block シリンダーブロック

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

ITEM 符号	PART NO. 部品番号	PART NAME	部 品 名	Q' TY 数量	S. C サ-ビ-ス コート	SERIAL NO. 適用号機	ICA 互 換 性	REPLACEABLE PART 代 替 部 品	
								PART NO. 部品番号	Q' TY 数量
1	YE3977851	Threaded Plug (M10 X 1.00 X 11.)	(M10 X 1.00 X 11.)	1					
2	YE3977853	Threaded Plug (M14 X 1.50 X 15.)	(M14 X 1.50 X 15.)	1					
3	YE3902343	Ring Dowel		2					
4	YE3903990	Hexagon Flange Head Cap Screw (M10 X 1.50 X 20.)	(M10 X 1.50 X 20.)	5					
5	YE3936352	Studded Flange Cap Screw		2					
6	YE5306621	Cylinder Block Stiffener		1					
7-16	++++++	Cylinder Block		1	D				
7	++++++	* Cylinder Block		1	D				
8	YE3900956	* Expansion Plug (17.73 mm.)	(17.73 mm.)	2					
9	YE3905401	* Expansion Plug		2					
10	YE3007635	* Expansion Plug		1					
11	YE3927948	* Fracture Resistant Screw		10					
12-13	++++++	* Main Bearing Cap		4	D				
12	YE5315765	** Ring Dowel		2					
13	++++++	** Main Bearing Cap		1	D				
12-14	++++++	* Main Bearing Cap		1	D				
12	YE5315765	** Ring Dowel		2					
14	YE3974158	** Main Bearing Cap		1					
15	YE4938189	* Expansion Plug		3					
16	YE4983253	* Bushing		2					
	YE4376419	Cylinder Block Kit		1	R				
	++++++	* Cylinder Block Hardware Kit		1	D				
	++++++	* Cylinder Block		1	D				
	YE5306621	* Cylinder Block Stiffener		1					

 
Crankshaft クランクシャフト

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

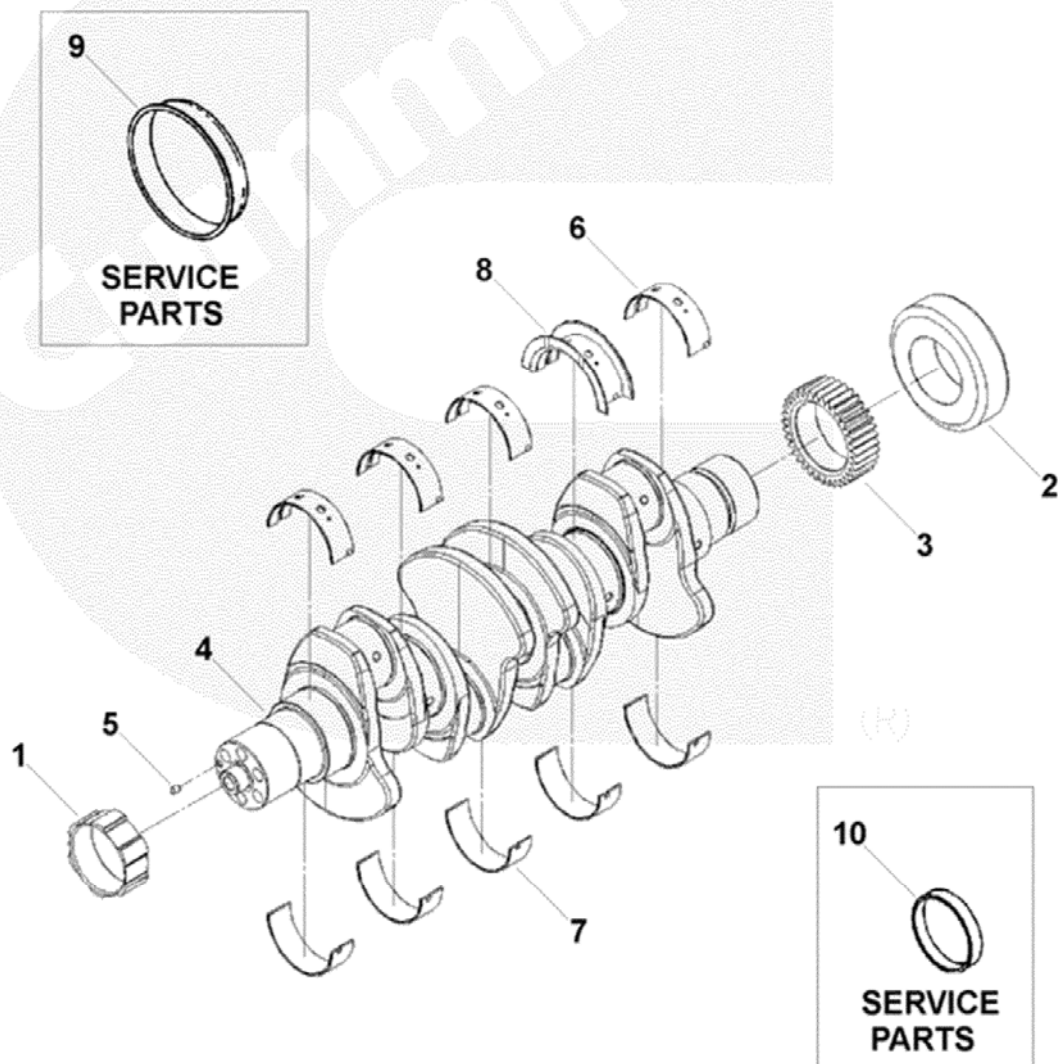

bb904gw

Crankshaft

クランクシャフト

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

ITEM 符号	PART NO. 部品番号	PART NAME	部 品 名	Q' TY 数量	S. C サ-ビ-ス コ-ド	SERIAL NO. 適用号機	ICA 互 換 性	REPLACEABLE PART 代 替 部 品	
								PART NO. 部品番号	Q' TY 数量
1-5	YE5289841	Engine Crankshaft		1					
1-4	YE5289840	* Engine Crankshaft		1					
1	YE4934418	** Crankshaft Gear		1					
2	++++++	** Shaft Collar		1	D				
3	++++++	** Crankshaft Gear		1	D				
4	++++++	** Engine Crankshaft		1	D				
5	YE3904483	* Pin Dowel		1					
6	++++++	Main Bearing (Standard.)	(Standard.)	4	D				
7	++++++	Main Bearing		5	D				
8	YE3978822	(Standard.) Thrust Bearing (Standard.)	(Standard.) (Standard.)	1					
6-8	YE4955856	Main Bearing Set (0.25 mm Oversize.)	(0.25 mm Oversize.)	1	R				
6	YE4938933	* Main Bearing (0.25 mm Oversize.)	(0.25 mm Oversize.)	4					
7	YE4938937	* Main Bearing (0.25 mm Oversize.)	(0.25 mm Oversize.)	5					
8	YE4938949	* Thrust Bearing		1					
6-8	YE4955857	(0.25 mm Oversize.) Main Bearing Set (0.50 mm Oversize.)	(0.25 mm Oversize.) (0.50 mm Oversize.)	1	R				
6	YE4938934	* Main Bearing (0.50 mm Oversize.)	(0.50 mm Oversize.)	4					
7	YE4938938	* Main Bearing (0.50 mm Oversize.)	(0.50 mm Oversize.)	5					
8	YE4938950	* Thrust Bearing (0.50 mm Oversize.)	(0.50 mm Oversize.)	1					
6-8	YE4955858	Main Bearing Set (0.75 mm Oversize.)	(0.75 mm Oversize.)	1	R				
6	YE4938935	* Main Bearing (0.75 mm Oversize.)	(0.75 mm Oversize.)	4					
7	YE4938939	* Main Bearing (0.75 mm Oversize.)	(0.75 mm Oversize.)	5					
8	YE4938951	* Thrust Bearing (0.75 mm Oversize.)	(0.75 mm Oversize.)	1					
6-8	YE4955859	Main Bearing Set (1.00 mm Oversize.)	(1.00 mm Oversize.)	1	R				
6	YE4938936	* Main Bearing		4					
7	YE4938940	(1.00 mm Oversize.) * Main Bearing (1.00 mm Oversize.)	(1.00 mm Oversize.) (1.00 mm Oversize.)	5					
8	YE4938952	* Thrust Bearing (1.00 mm Oversize.)	(1.00 mm Oversize.)	1					

Crankshaft
クランクシャフト

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

M E M O

 
Valve Tappets バルブタペット

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins inc

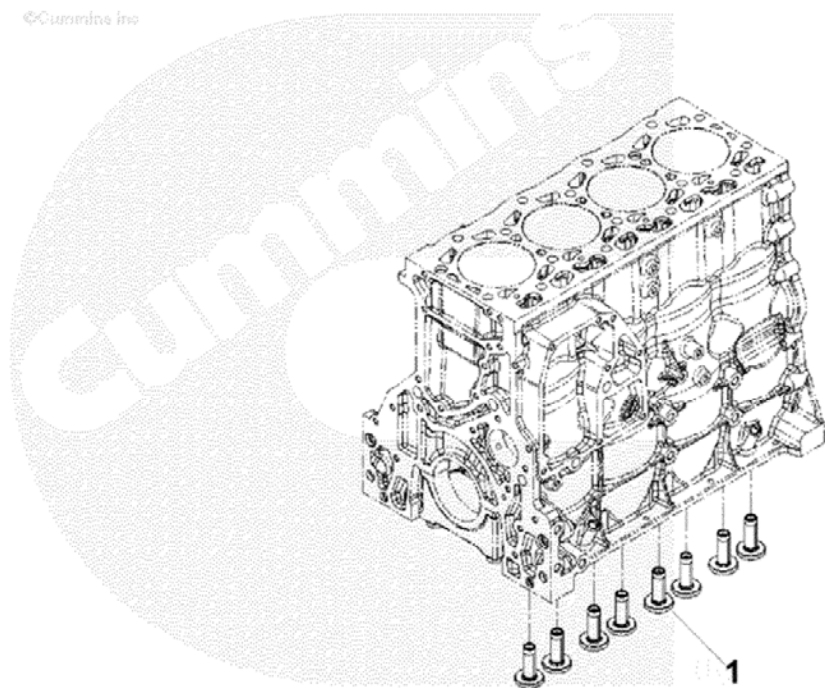

bb901zf

Valve Tappets
バルブタペット

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Crankcase Breather ブリーザ、クランクケース

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins inc

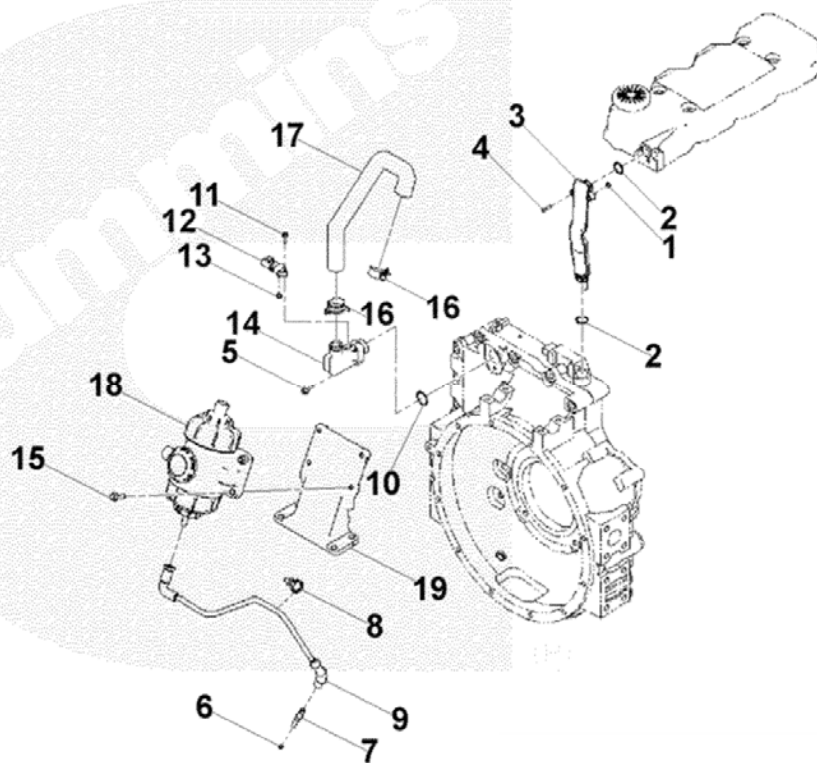

br969ga

Crankcase Breather ブリーザ、クランクケース

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

ITEM 符号	PART NO. 部品番号	PART NAME	部 品 名	Q'TY 数量	S.C サビ・ス コート	SERIAL NO. 適用号機	ICA 互 換 性	REPLACEABLE PART 代 替 部 品	
								PART NO. 部品番号	Q'TY 数量
1-3	YE3971371	Breather Tube		1					
1	YE3052587	* O-Ring Seal		1					
2	YE3958414	* O-Ring Seal		2					
3	+++++	* Breather Tube		1	D				
4	YE3977572	Round Head Cap Screw		2					
5	YE3901865	(M5 X 0.8 X 20.) Hexagon Flange Head Cap S	(M5 X 0.8 X 20.)	1					
6-7	YE4945464	(M6 X 1.00 X 20.) Tube , Lubrication Oil Dra	(M6 X 1.00 X 20.)	1					
6	YE3946188	* O-Ring Seal		1					
7	YE4934731	* Lubricating Oil Drain Tub		1					
8-9	YE5292413	Lubricating Oil Drain Tube		1					
8	YE5257044	* Wire Retaining Clip		1					
9	+++++	* Lubricating Oil Drain Tub		1	D				
10-14	+++++	Breather Adapter		1	D				
10	YE145530	* O-Ring Seal		1					
11	YE3679118	* Hexagon Flange Head Cap S		1					
12	YE4984575	(M5 X 0.80 X 16.) * Pressure Sensor (Crankcase Breather.)	(M5 X 0.80 X 16.) (Crankcase Breather.)	1					
13	YE4928592	** O-Ring Seal		1					
14	YE5297653	* O-Ring Adapter		1					
15-19	YE5293234	Crankcase Breather		1					
15	YE3902114	* Hexagon Flange Head Cap S		4					
16	YE3925089	(M8 X 1.25 X 30.) * Spring Hose Clamp	(M8 X 1.25 X 30.)	2					
17	YE5285569	* Molded Hose		1					
18	YE5287708	* Crankcase Breather		1					
19	YE5292847	* Breather Support		1					
	YE5288839	** Breather Element		1					
		(Not Shown In Graphic.)	(Not Shown In Graphic.)						

 
Crankcase Breather Plumbing ブリーザ配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

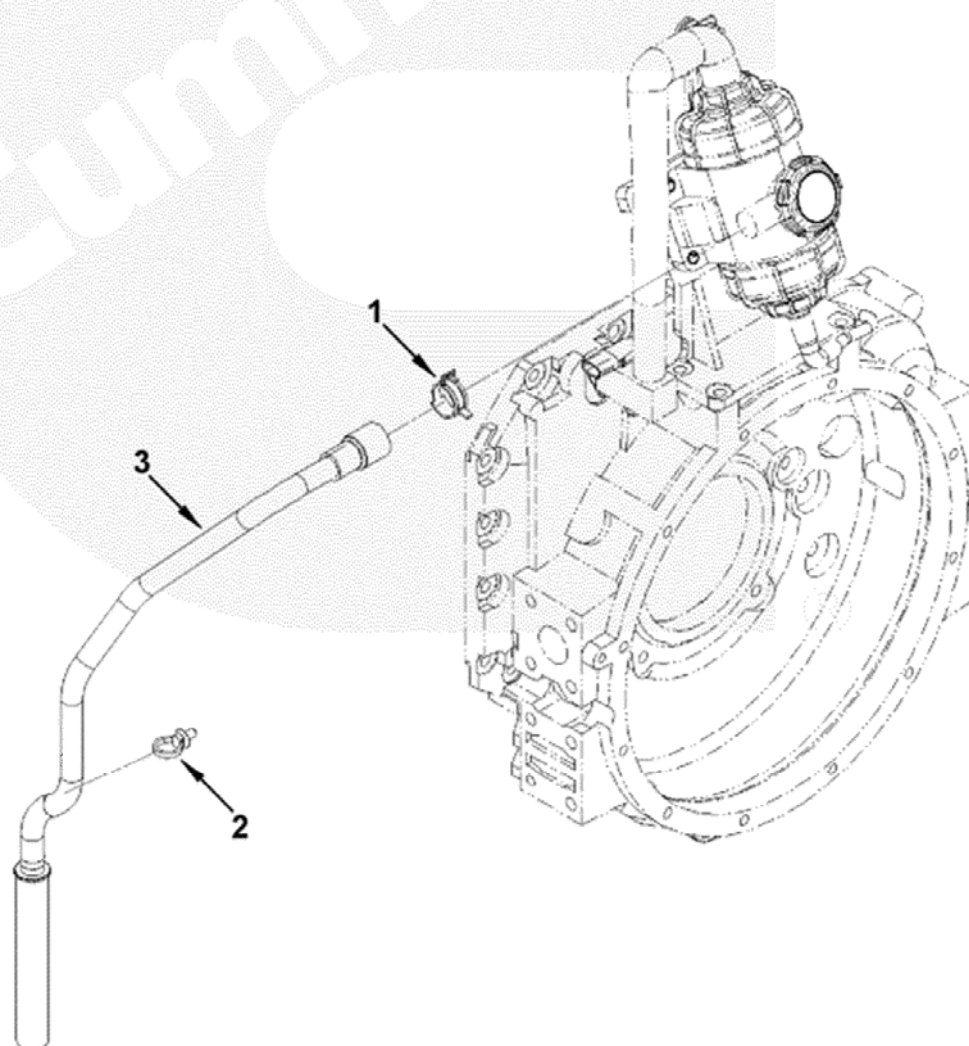

br961gt

ブリーザ配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Crankcase Breather Mounting クランクケースブリーザーマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

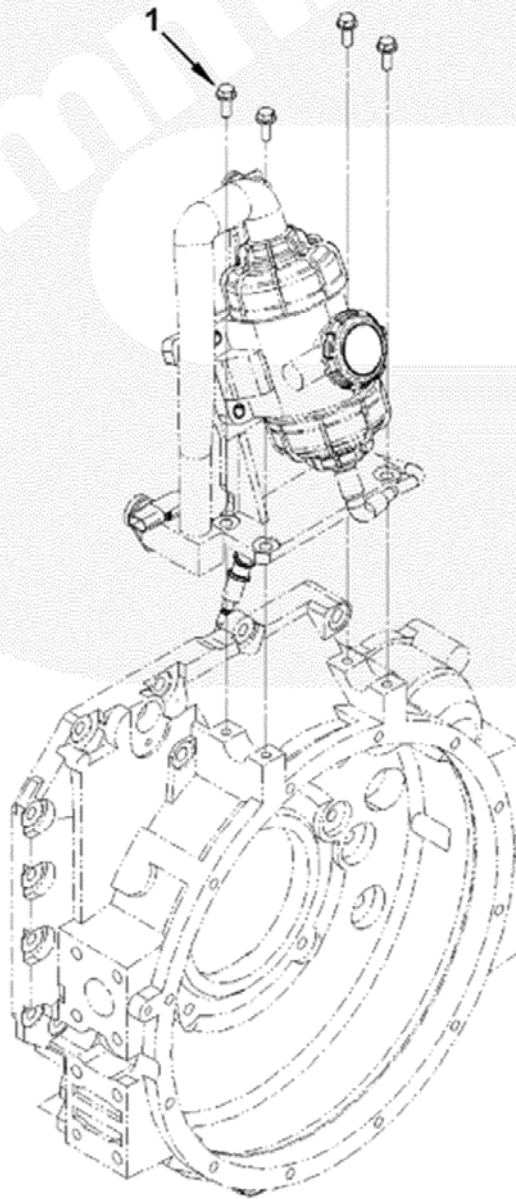

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

– 22 –

 
Vibration Damper バイブレーションダンパー

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

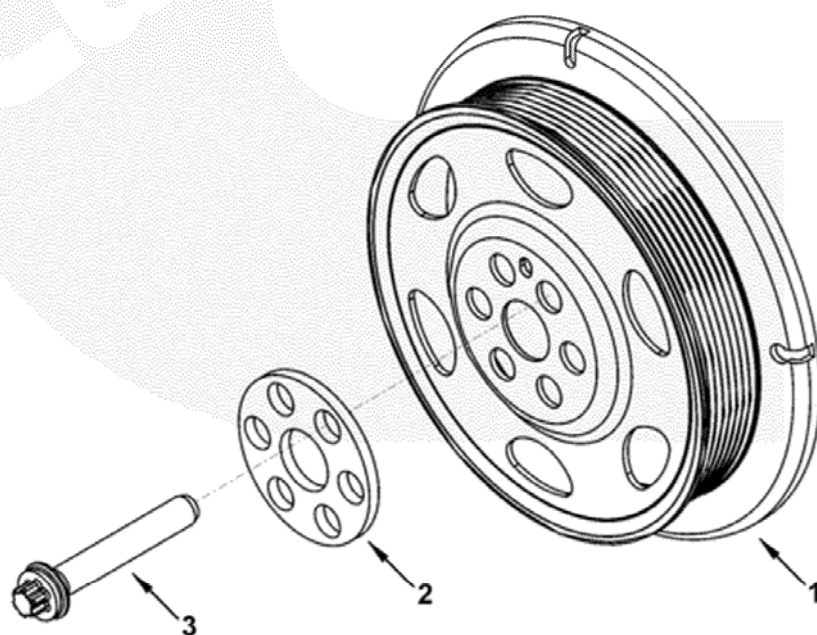

da951gv

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

- 24 -

Drain Location

 
ドレン用品

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

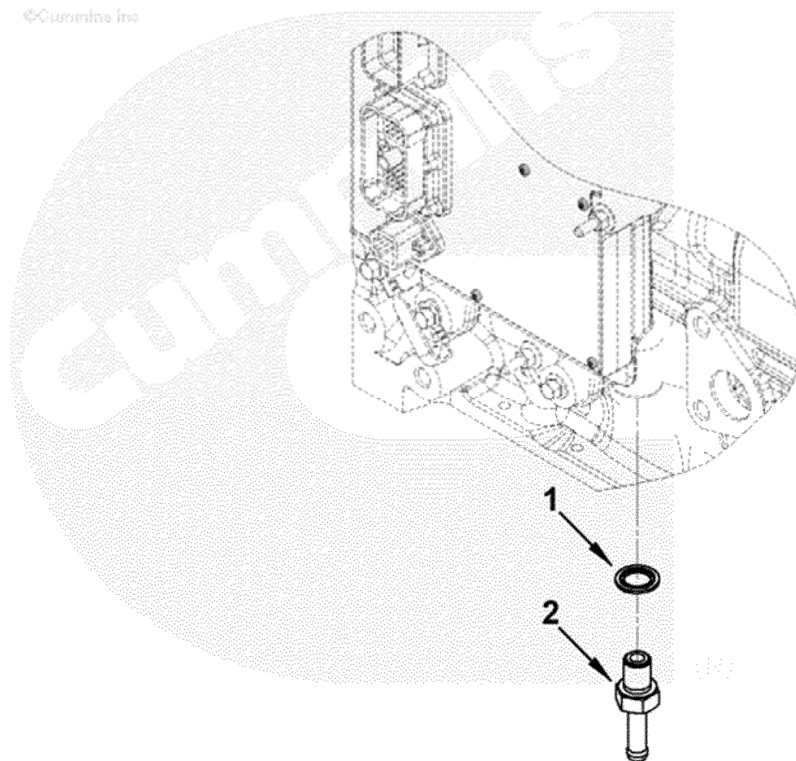

fi900zb

Drain Location

ドレン用品

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Rear Gear Train Mounting リアギヤマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

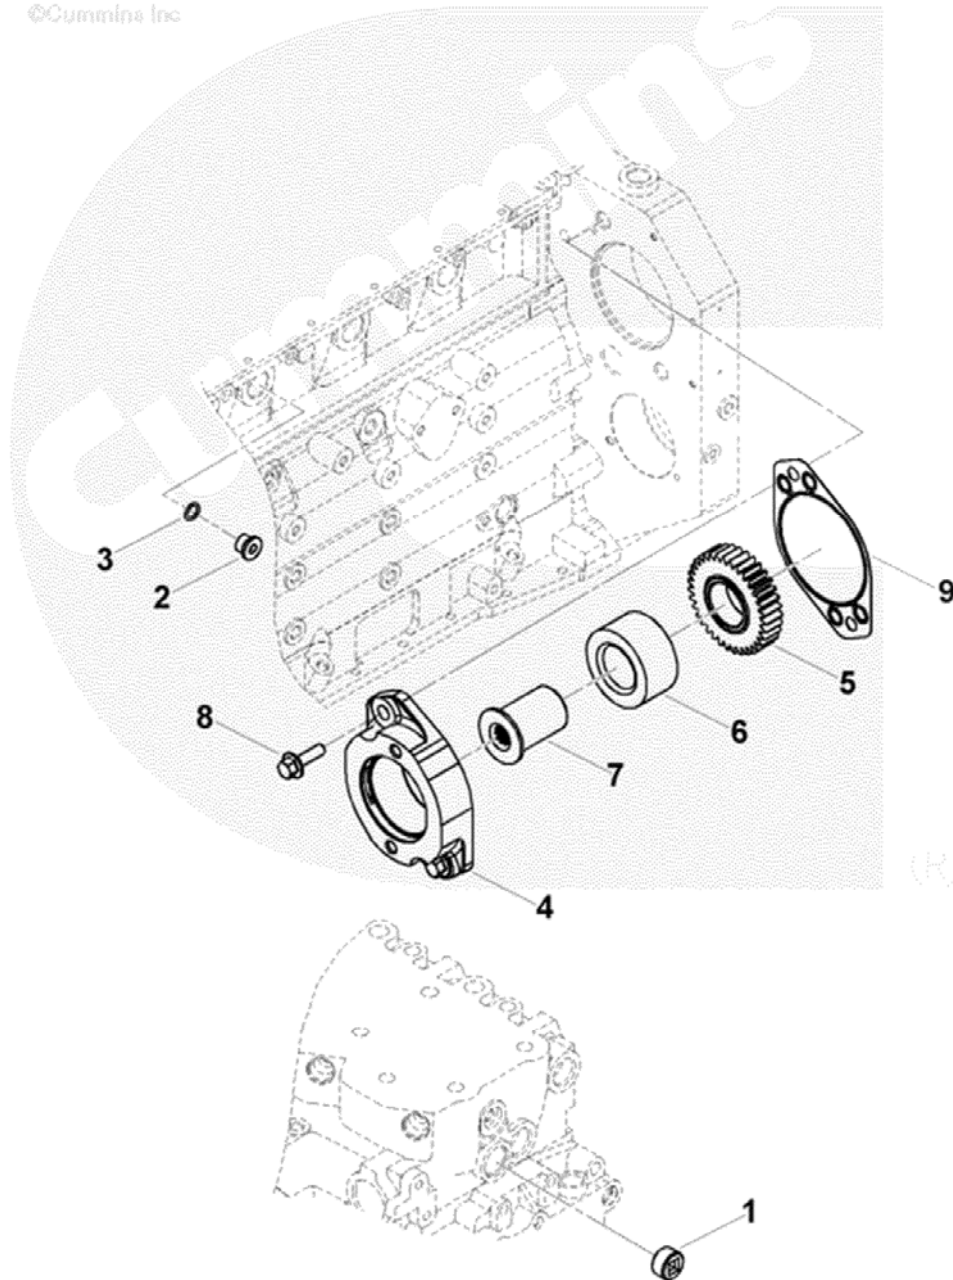

dr900zd

Rear Gear Train Mounting

リアギヤマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

ITEM 符号	PART NO. 部品番号	PART NAME	部 品 名	Q'TY 数量	S.C サビ・ス コート	SERIAL NO. 適用号機	ICA 互 換 性	REPLACEABLE PART 代 替 部 品	
								PART NO. 部品番号	Q'TY 数量
1	YE4933532	Pipe Plug (3/4 NPT)	(3/4 NPT)	1					
2-3	YE3089567	Threaded Plug		1					
2	++++++	* Threaded Plug (M16 X 1.50 X 13)	(M16 X 1.50 X 13)	1	D				
3	YE3679139	* O-Ring Seal		1					
4-7	YE3974850	Hydraulic Pump Adapter		1					
4	++++++	* Hydraulic Pump Adapter		1	D				
5	YE5271490	* Accessory Drive Gear		1					
6	YE3935644	* Roller Bearing		1					
7	YE3935646	* Accessory Drive Shaft		1					
8	YE3900637	Hexagon Flange Head Cap Scr (M12 x 1.75 x 35)	(M12 x 1.75 x 35)	2					
9	YE4896897	Accessory Drive Cover Gaske		1					

 
Thermostat サーモスタット

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins inc

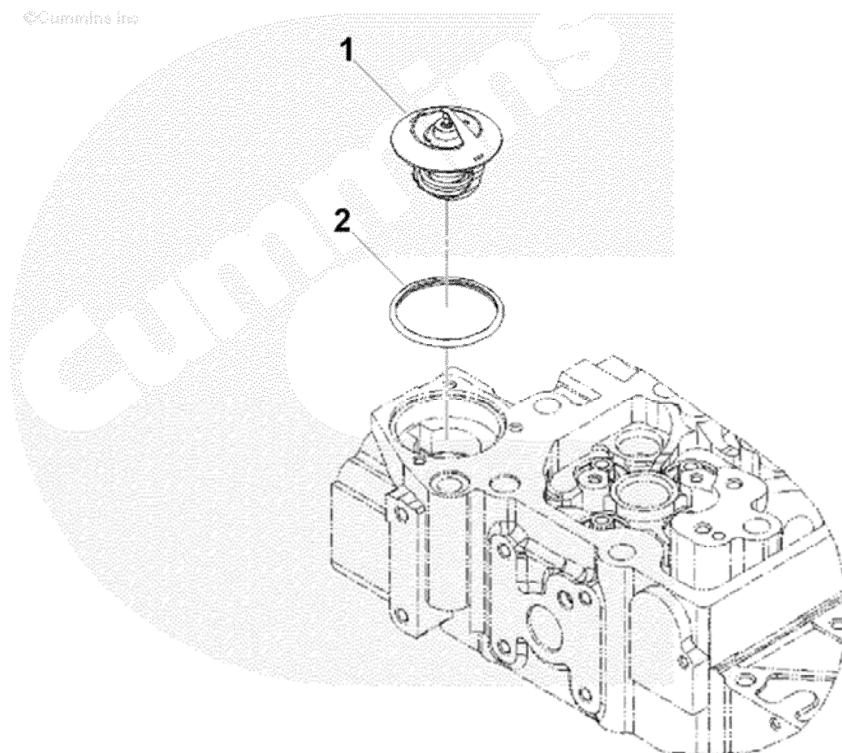

ec900zf

Thermostat
サーモスタット

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Alternator オルタネータ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

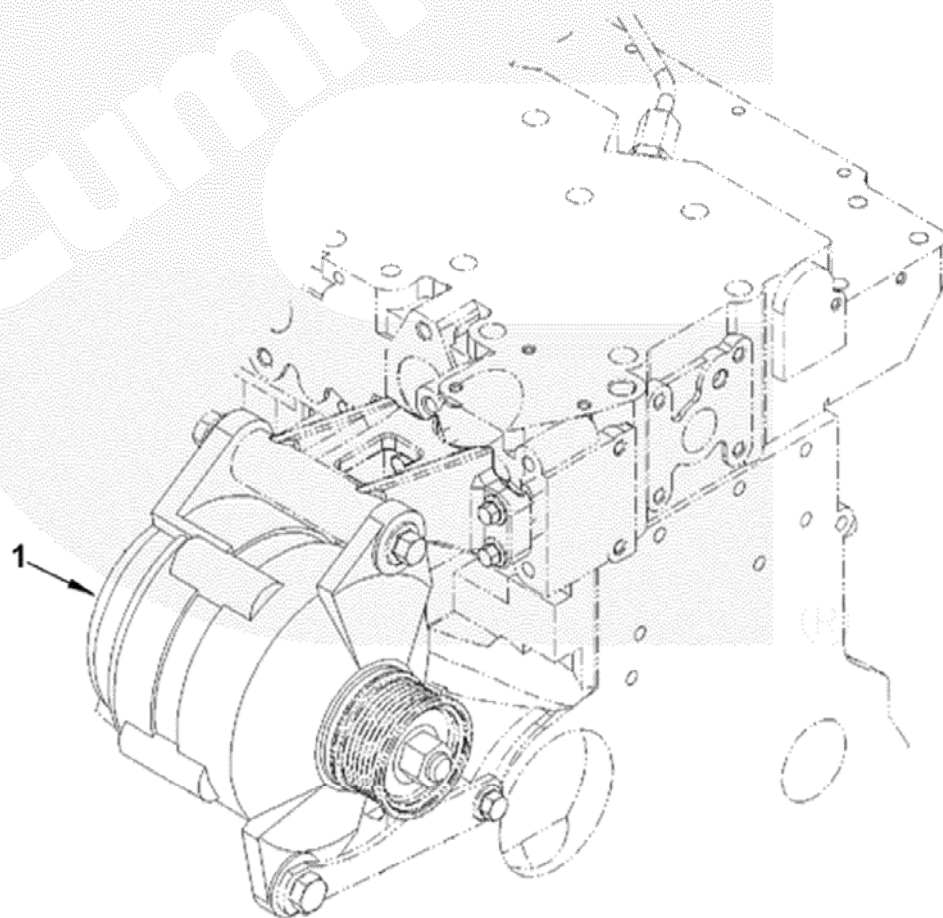

ee900ze

Alternator
オルタネータ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Alternator Mounting オルタネータマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

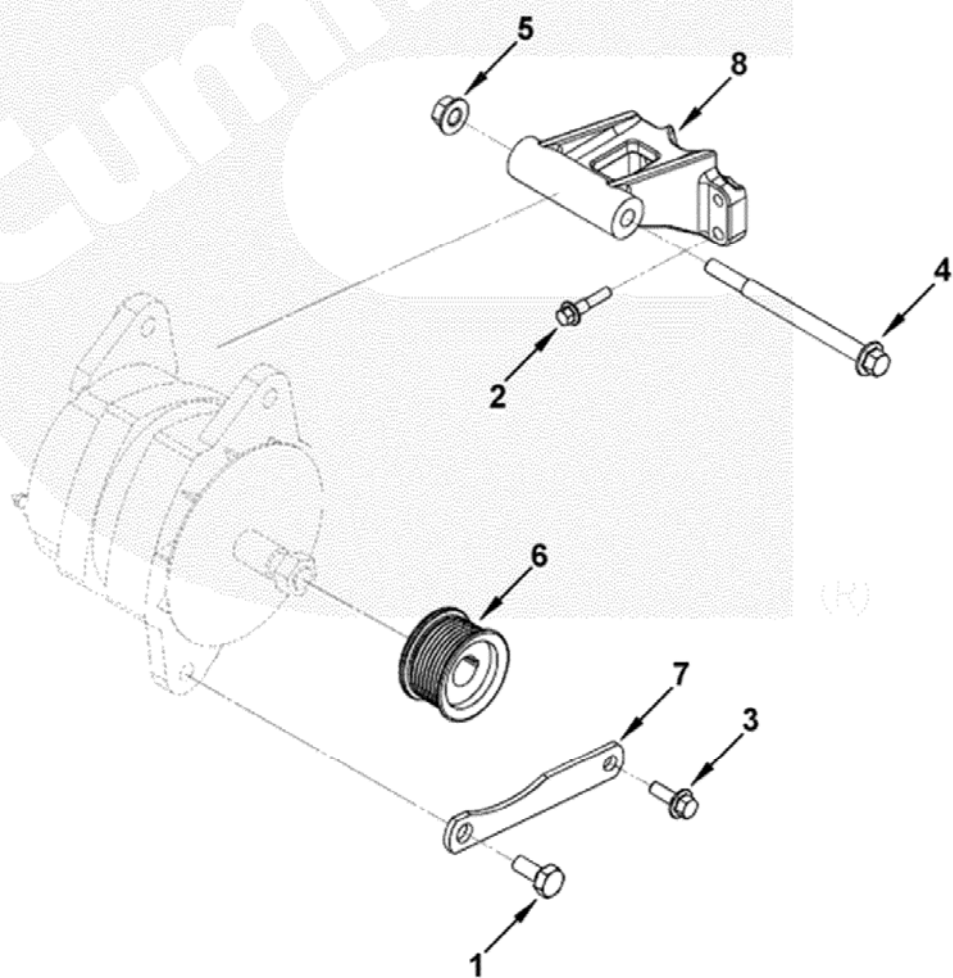

eh954zs

Alternator Mounting オルタネータマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Exhaust Recirculation エキゾーストサーキュレーション

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

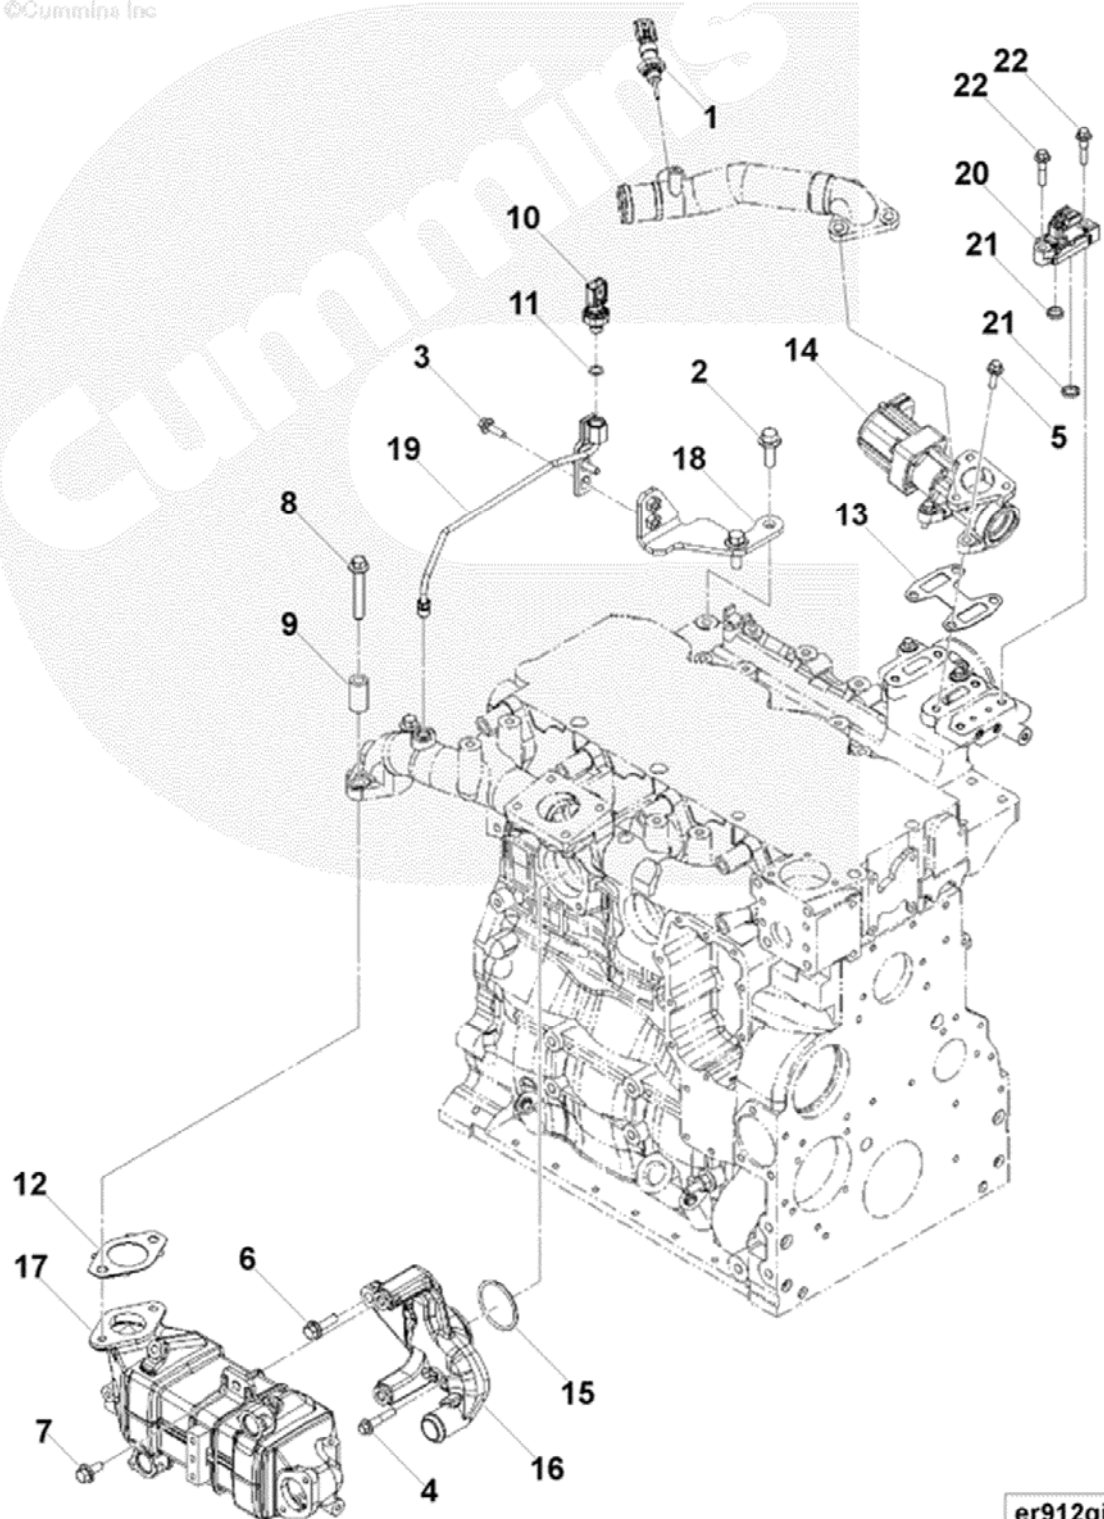

er912gi

Exhaust Recirculation エキゾーストサーキュレーション

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

ITEM 符号	PART NO. 部品番号	PART NAME	部 品 名	Q'TY 数量	S.C サービスマ コート	SERIAL NO. 適用号機	ICA 互換性	REPLACEABLE PART 代替部品	
								PART NO. 部品番号	Q'TY 数量
1	YE2872858	Temperature Sensor (Exhaust Gas Temperature.)		1					
2	YE3093938	Hexagon Flange Head Cap Scr		2					
3	YE3900631	Hexagon Flange Head Cap Scr (M8 X 1.25 X 25.)	(M8 X 1.25 X 25.)	2					
4	YE3900678	Hexagon Flange Head Cap Scr (M8 X 1.25 X 40.)	(M8 X 1.25 X 40.)	2					
5	YE3902114	Hexagon Flange Head Cap Scr (M8 X 1.25 X 30.)	(M8 X 1.25 X 30.)	4					
6	YE3903112	Hexagon Flange Head Cap Scr (M10 X 1.50 X 30.)	(M10 X 1.50 X 30.)	1					
7	YE3903990	Hexagon Flange Head Cap Scr (M10 X 1.50 X 20.)	(M10 X 1.50 X 20.)	2					
8	YE3944593	Hexagon Flange Head Cap Scr		2					
9	YE3945252	Mounting Spacer		2					
10	YE4928594	Pressure Sensor		1					
11	YE4010519	* O-Ring Seal		1					
12	YE5266422	Exhaust Manifold Gasket		1					
13	YE5296559	Connection Gasket		1					
14	+++++	Exhaust Gas Recirculation V		1	D				
15-16	YE5292819	Exhaust Gas Recirculation M		1					
15	YE3910517	* O-Ring Seal		1					
16	+++++	*EGR Module Support		1	D				
17	YE5293236	Exhaust Gas Recirculation C (NX Part.)	(NX Part.)	1					
18	YE5296739	Tube Brace		1					
19	YE5296741	Pressure Sensing Tube		1					
20	YE4384138	Differential Pressure Senc		1					
21	YE4384356	* Rectangular Ring Seal		2					
22	YE3900632	Hexagon Flange Head Cap Scr (M8 X 1.25 X 35.)	(M8 X 1.25 X 35.)	2					
13-14	YE4376166	Exhaust Recirculation Valve		1	R				
13	YE5296559	* Connection Gasket		1					
14	+++++	* Exhaust Gas Recirculation		1	D				
	YE5296560	* Connection Gasket		1					
		(Non-Komatsu.)	(Non-Komatsu.)						

 
Exhaust Recirculation Air Plumbing エキゾーストサーキュレーションエア配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

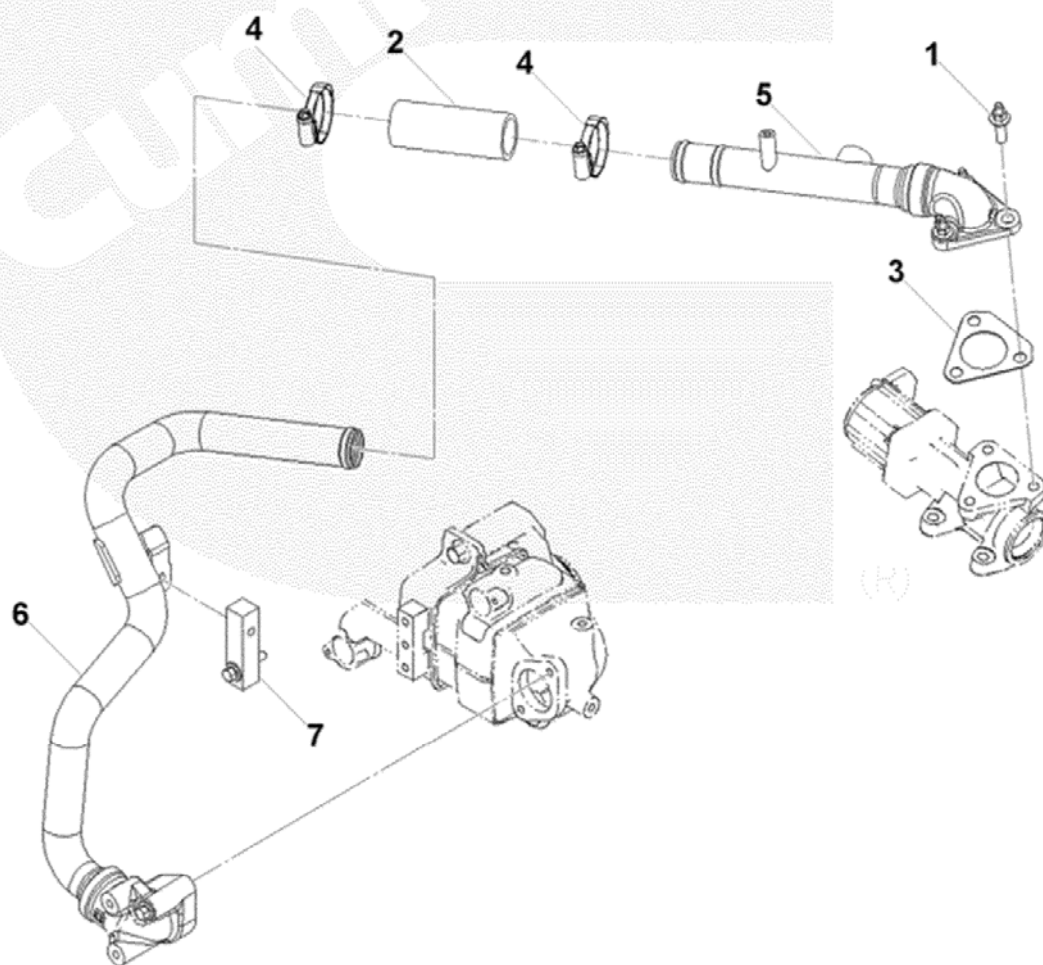

er917gi

Exhaust Recirculation Air Plumbing
エキゾーストサーキュレーションエア配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Exhaust Recirculation Water Plumbing エキゾーストサーキュレーションウォーター配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

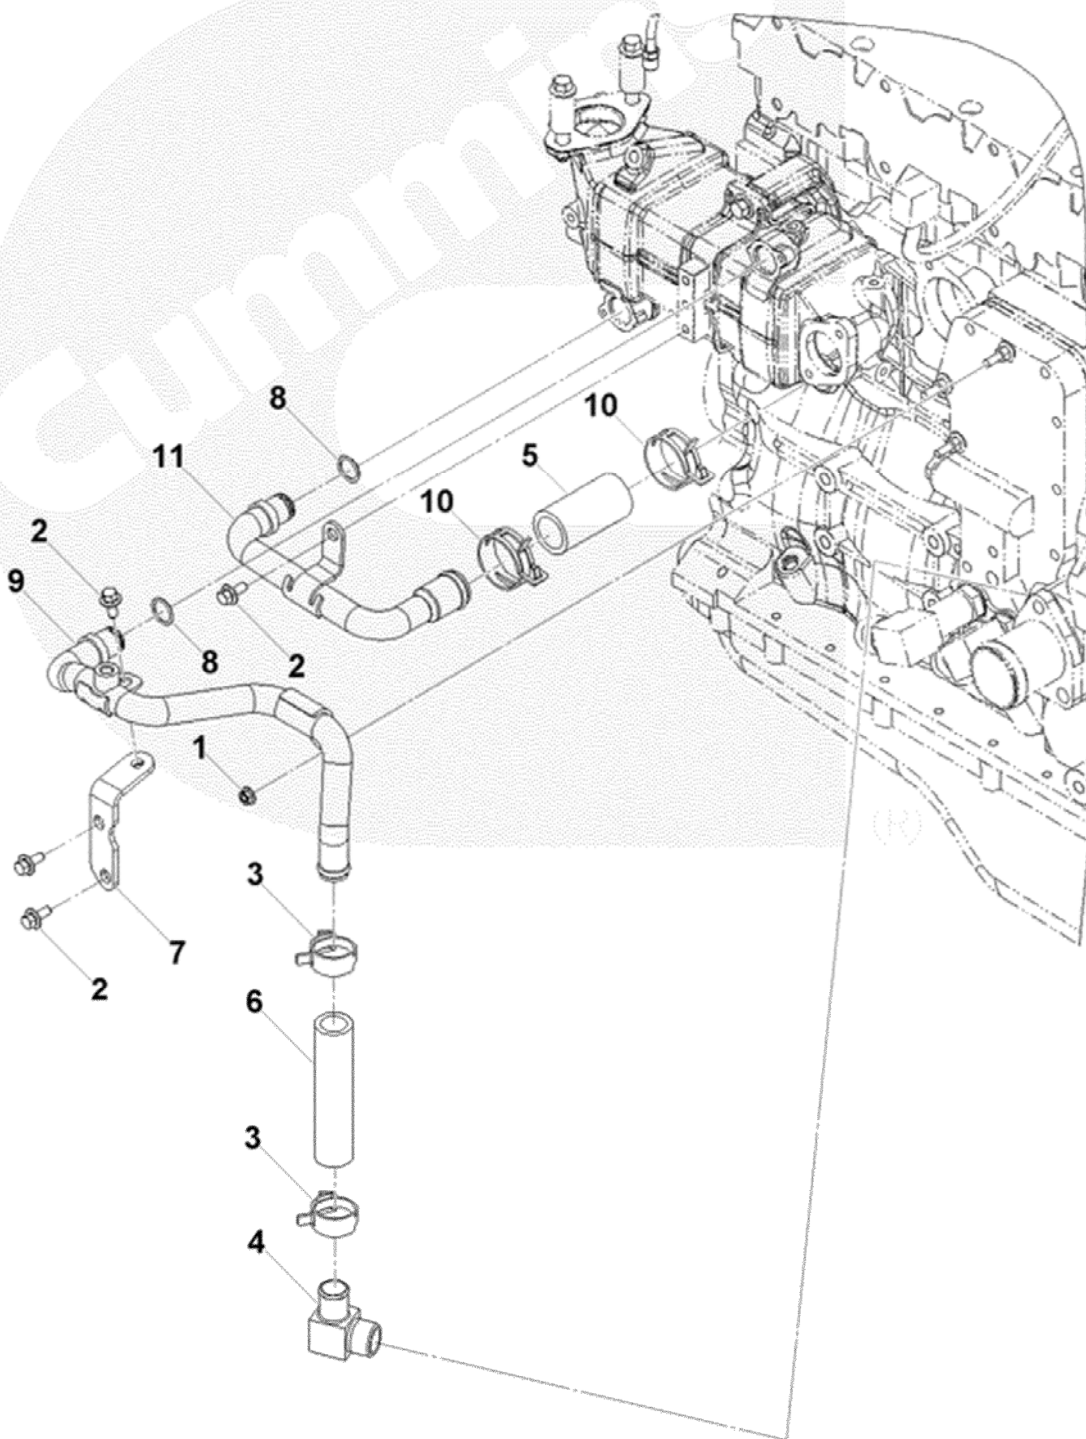

er912gj

Exhaust Recirculation Water Plumbing
エキゾーストサーキュレーションウォーター配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Fan Drive ファンドライブ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

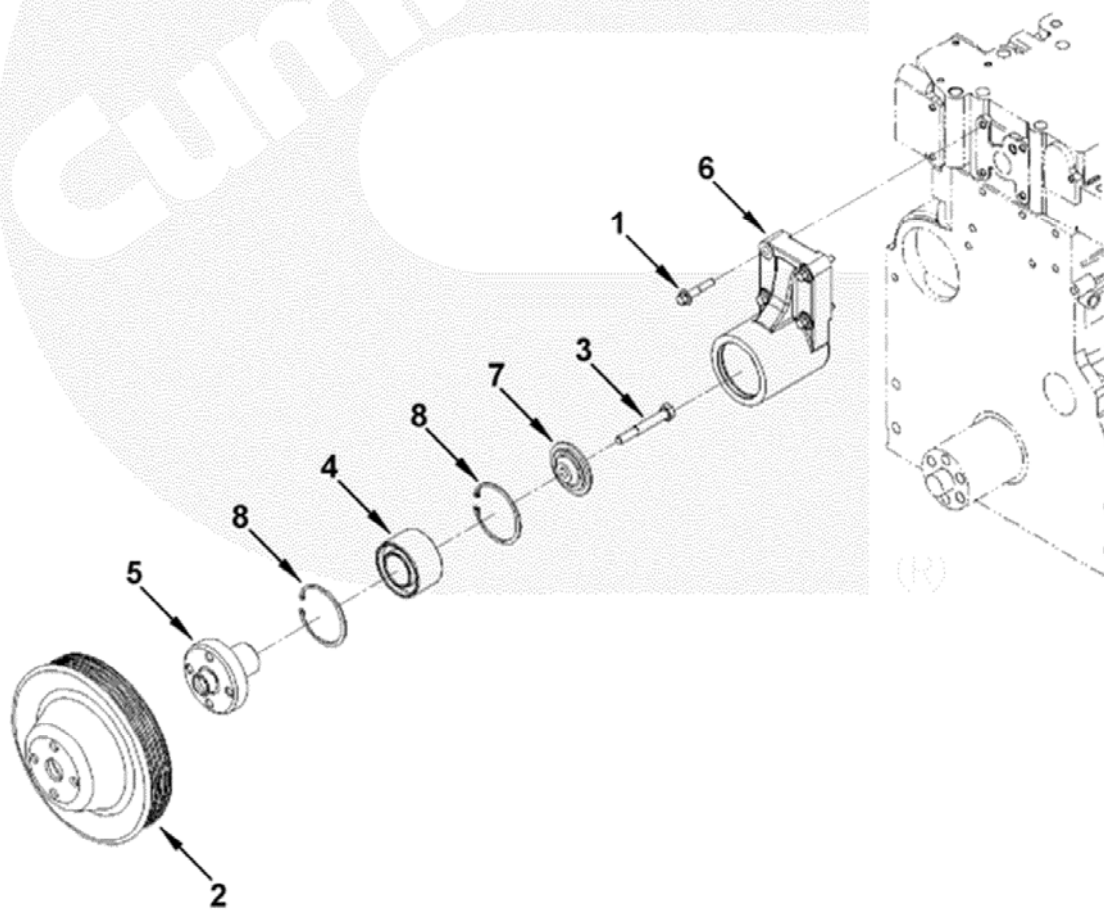

fa901zo

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

- 42 -

 
Fan Drive Mounting ファンドライブマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

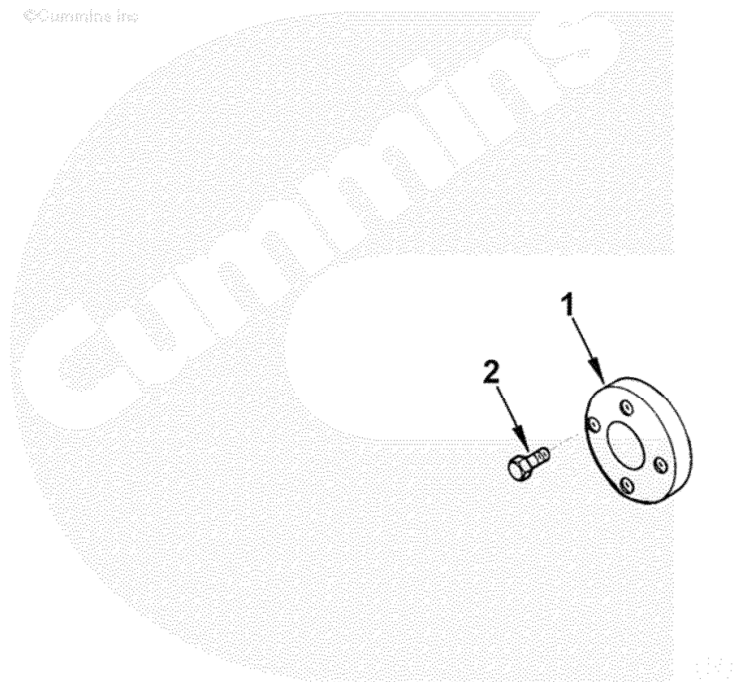

sp951gg

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

- 44 -

 
Fuel Drain Plumbing 燃料ドレン配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

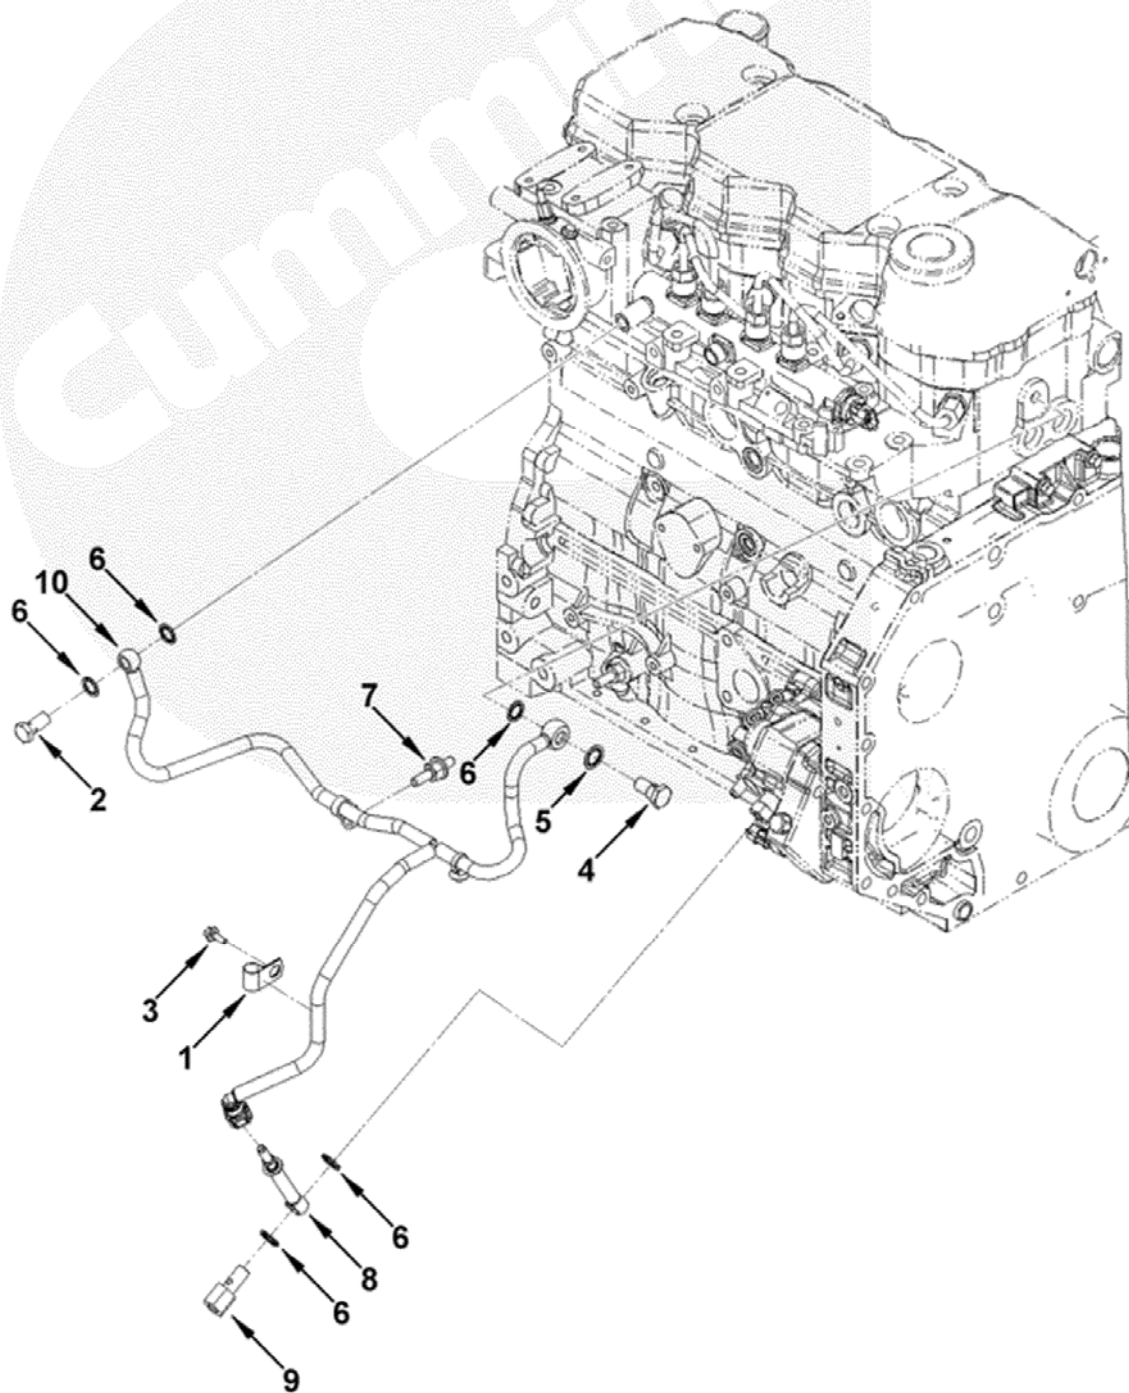

fd900gv

燃料ドレン配管

Serial No. (適用号機): -

- 46 -

Fuel Filter Location

 
燃料フィルタ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

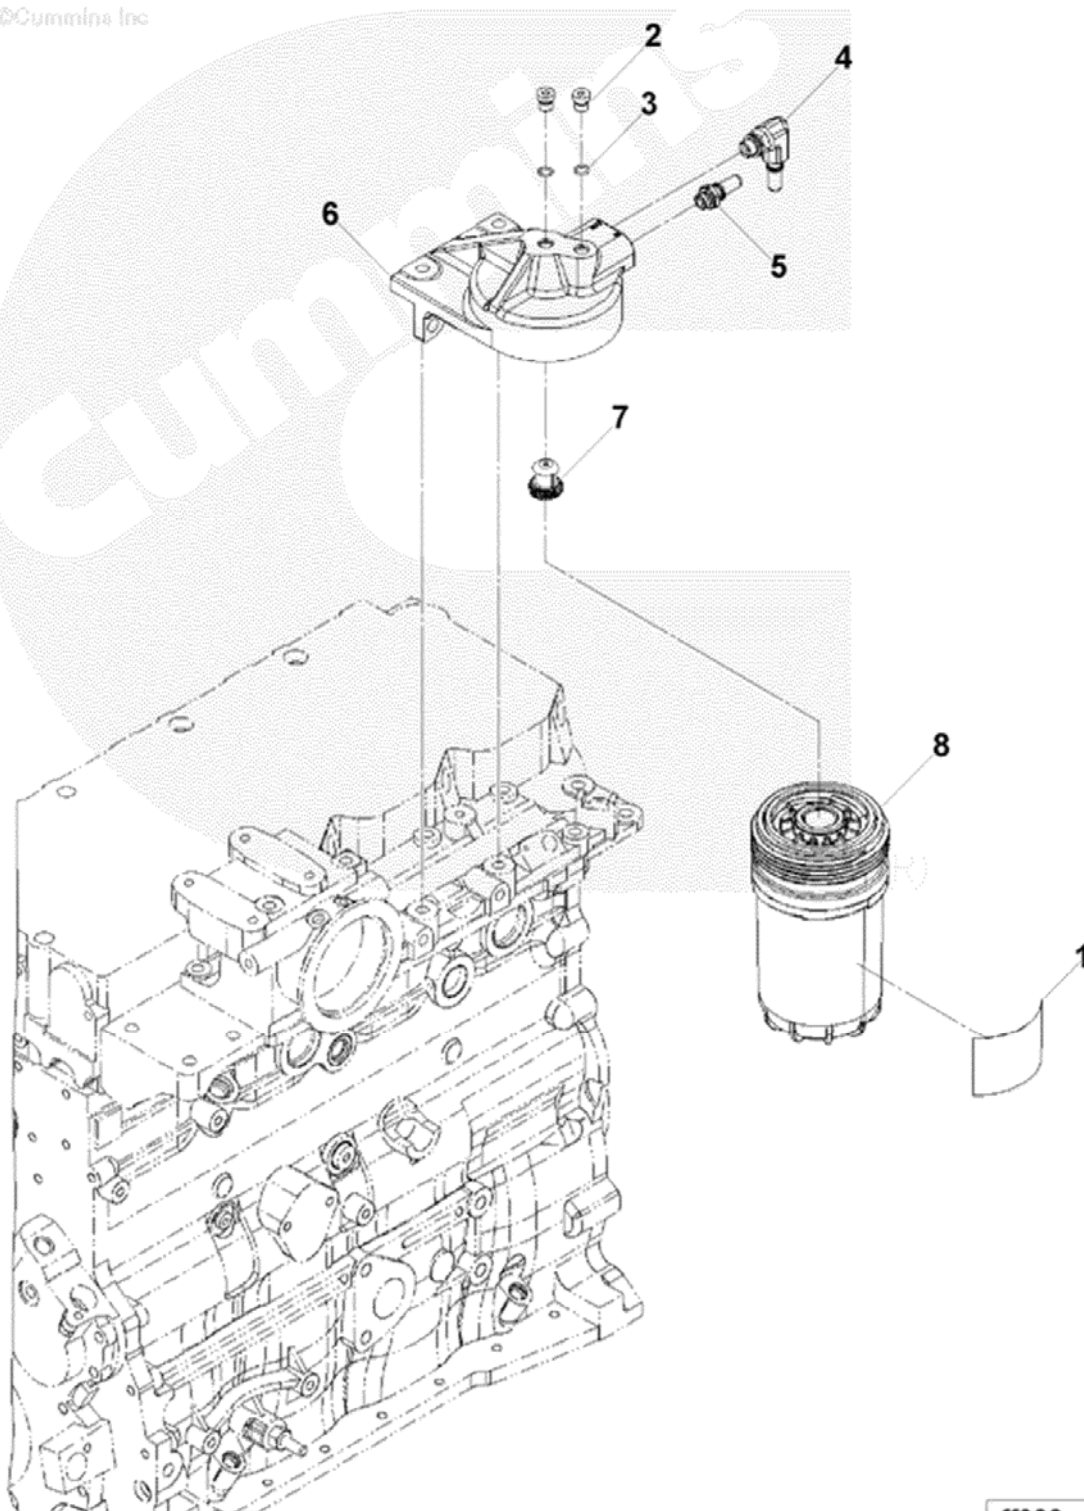

ff982gw

燃料フィルタ

Mark (記号): -

Serial No. (適用号機): -

- 48 -

 
Fuel Filter Plumbing 燃料フィルタ配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

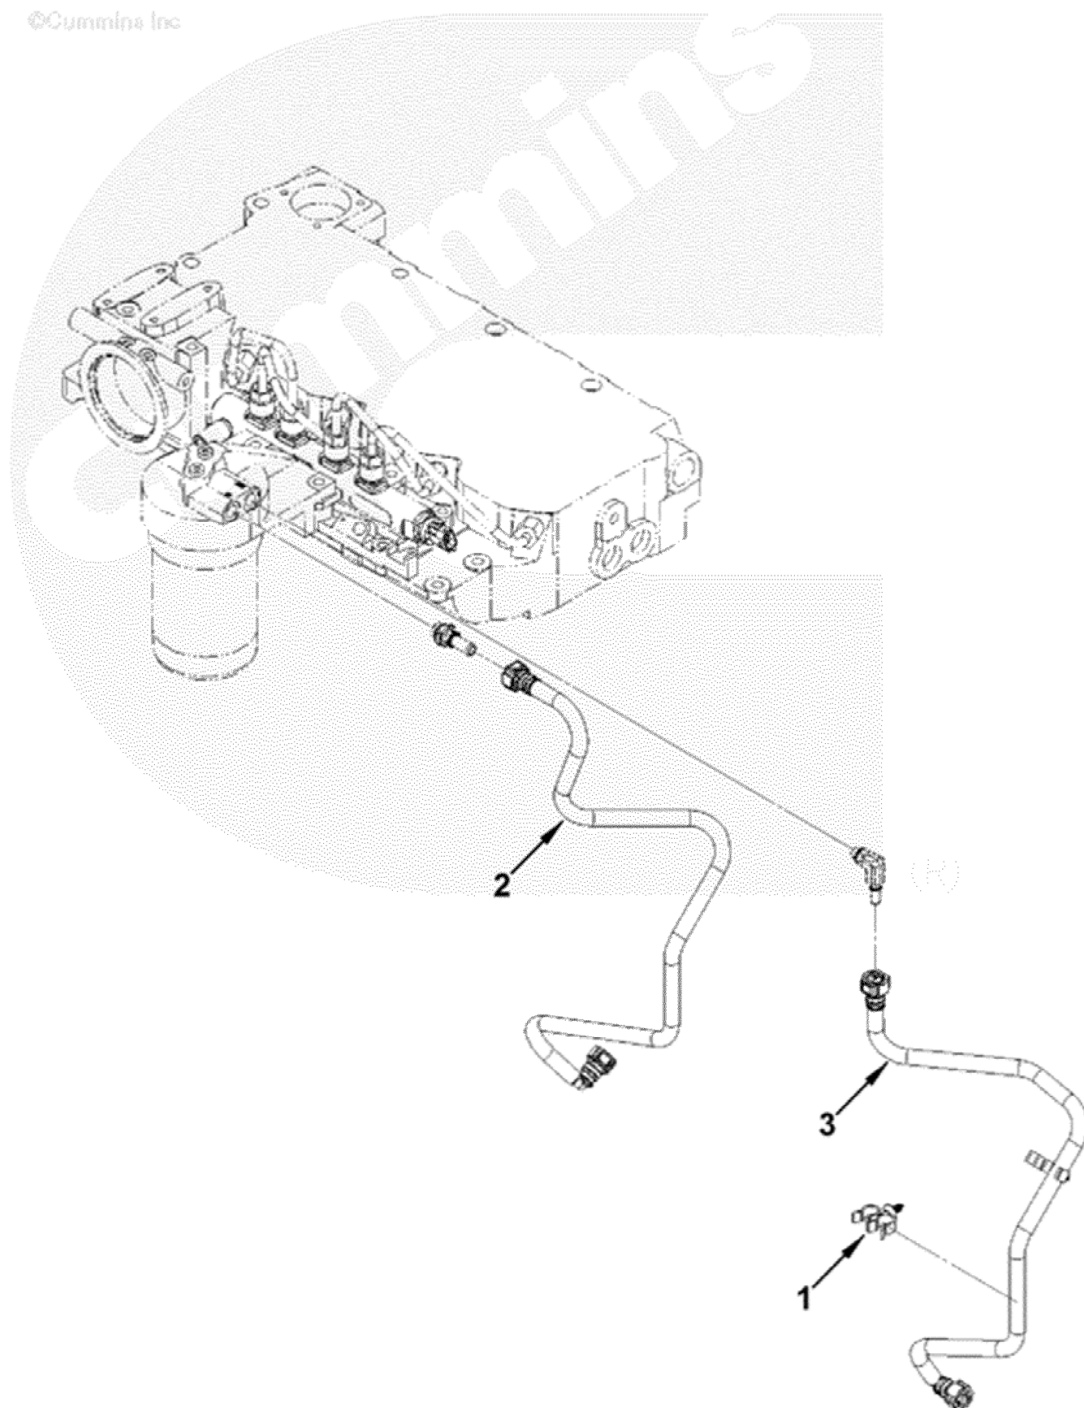

ff979ga

燃料フィルタ配管

Serial No. (適用号機): -

– 50 –

 
Fuel Filter Mounting 燃料フィルタマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

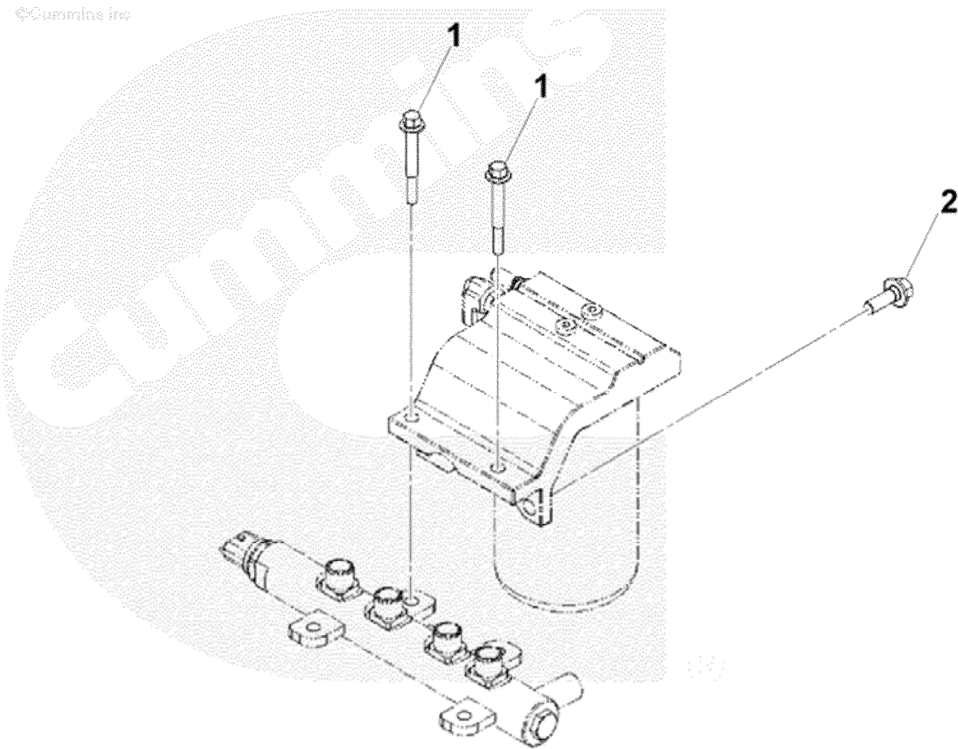

ff971gr

Fuel Filter Mounting

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Flywheel Housing フライホイールハウジング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

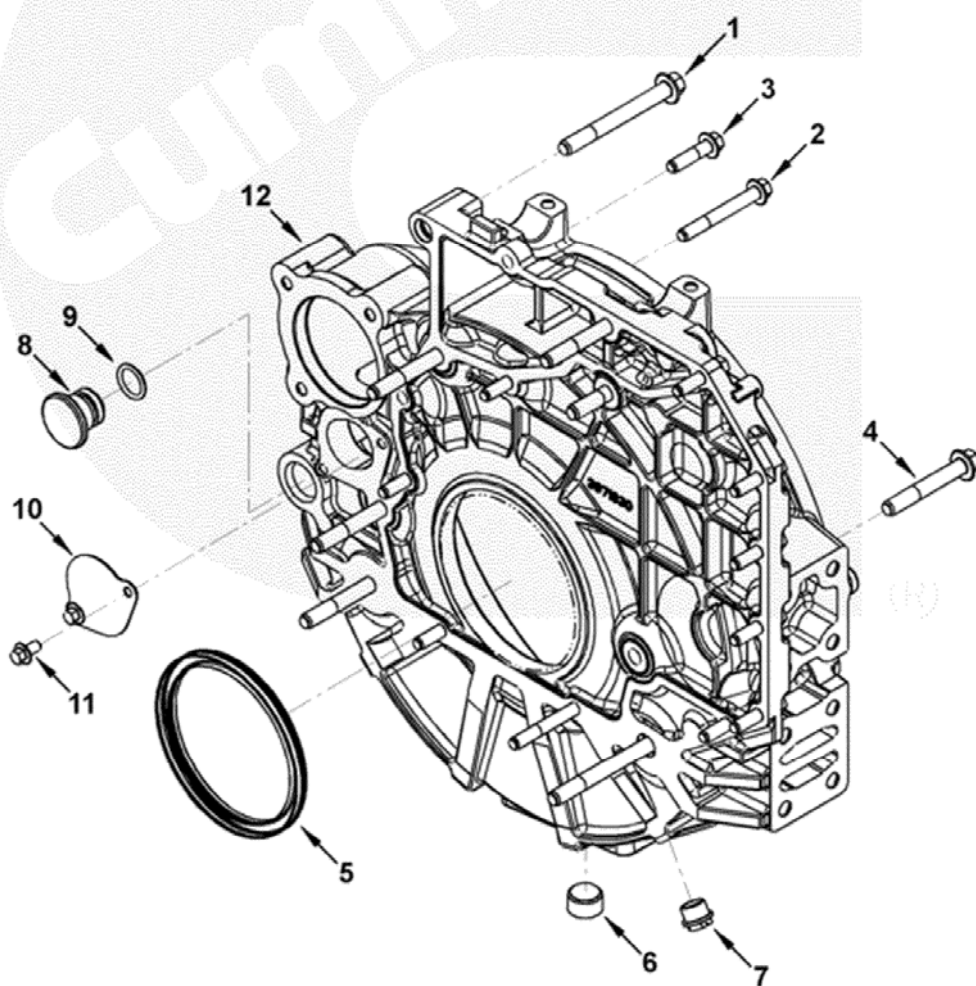

fh955gb

Flywheel Housing
フライホイールハウジング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Fuel Inlet Fitting 燃料インレットフィッティング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

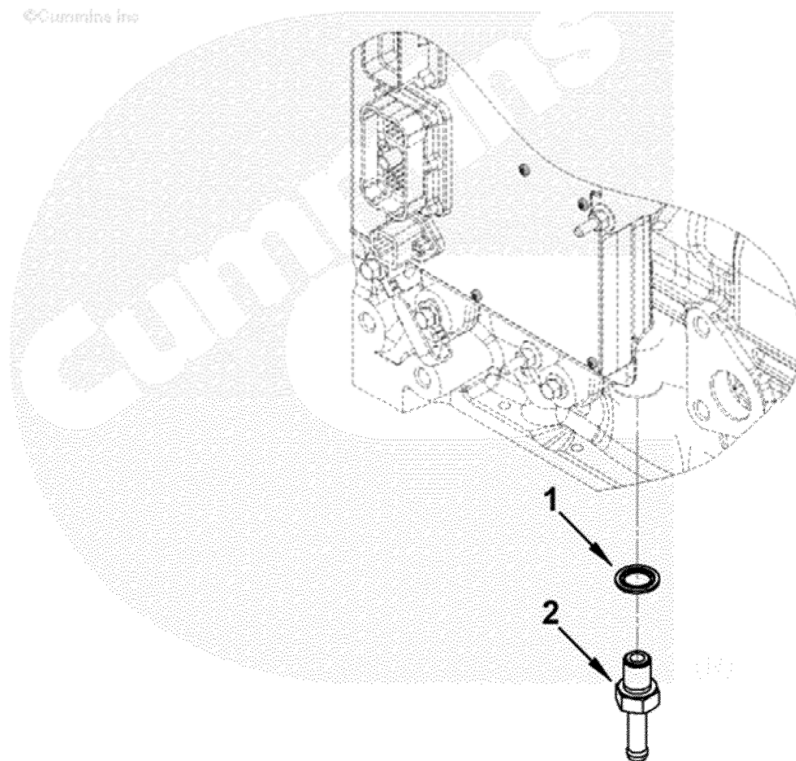

fi900zb

Fuel Inlet Fitting

燃料インレットフィッティング

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Fuel Pump 燃料ポンプ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

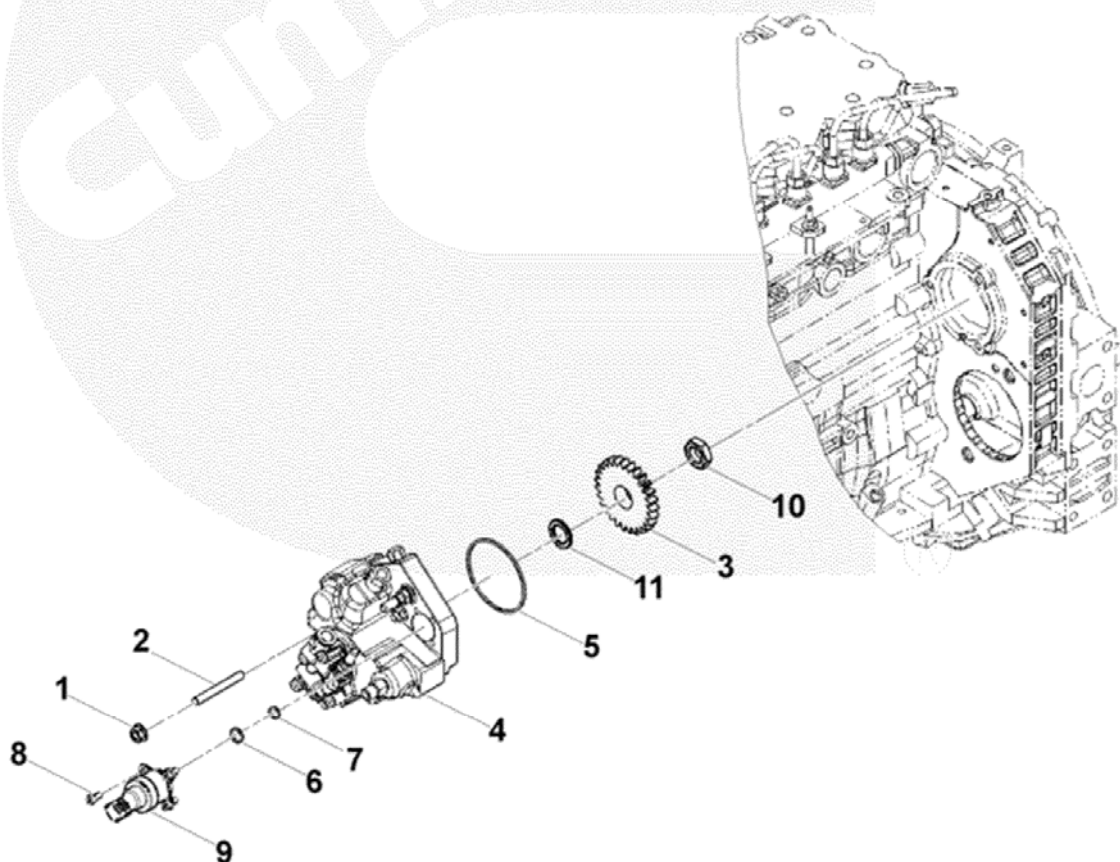

fp966go

Fuel Pump
燃料ポンプ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

Fuel System Accessories

 
燃料システムアクセサリ

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

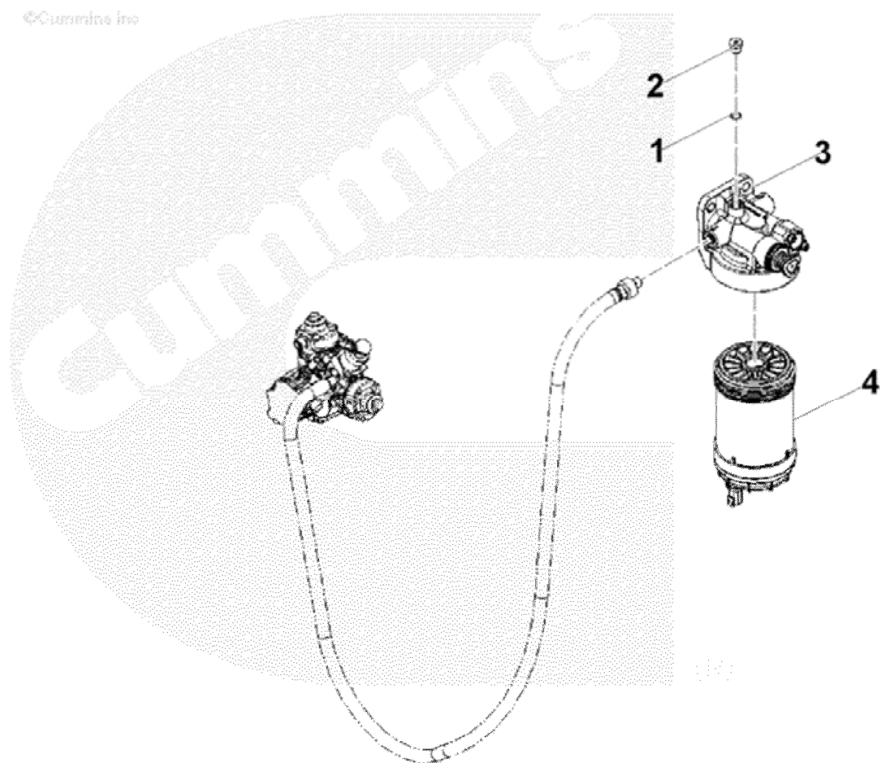

fs968gk

燃料システムアクセサリ

Serial No. (適用号機): -

– 60 –

Fuel Plumbing

 
燃料配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

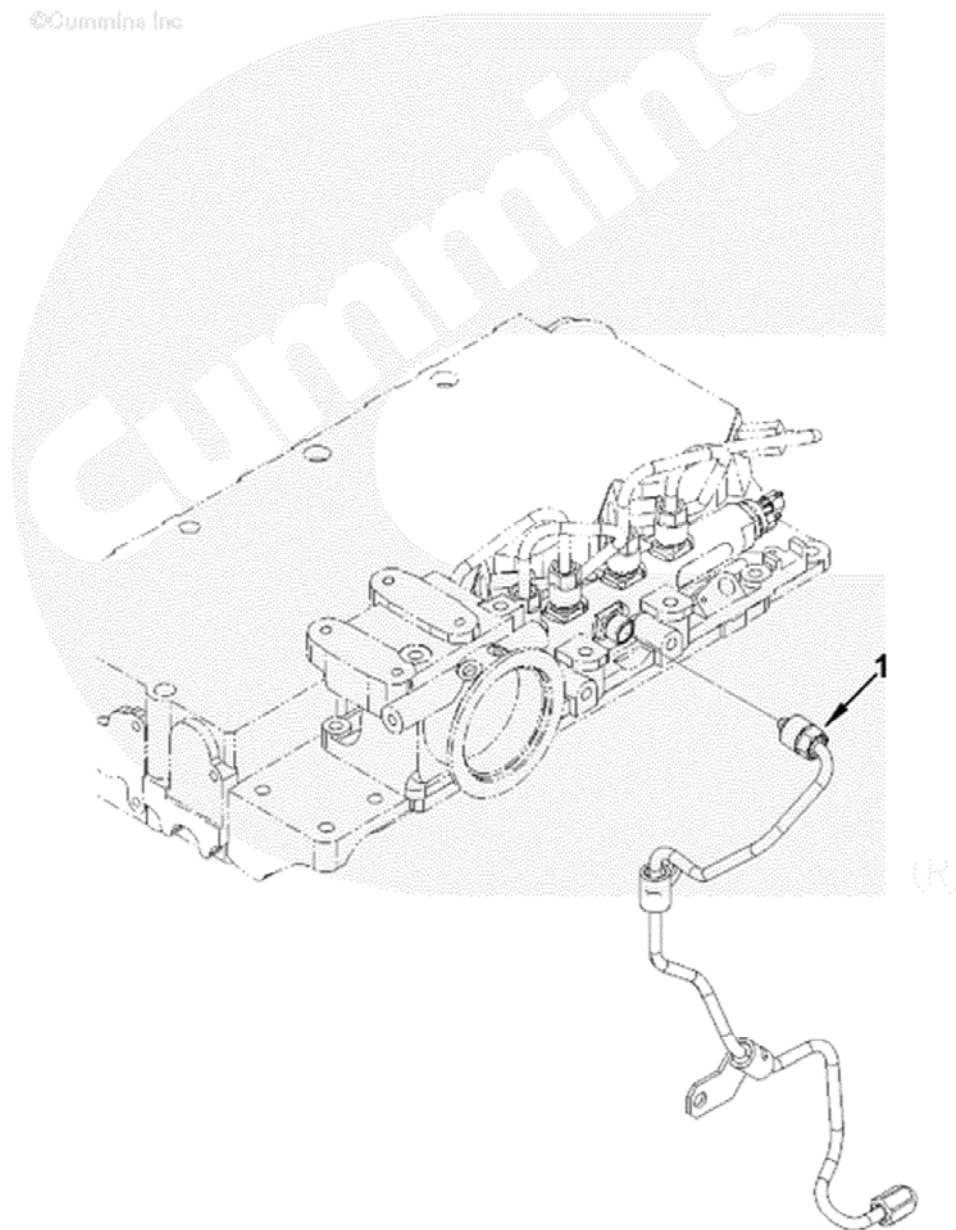

ft974gz

燃料配管

Mark (記号): -

Serial No. (適用号機): -

- 62 -

 
Flywheel Mounting フライホイールマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

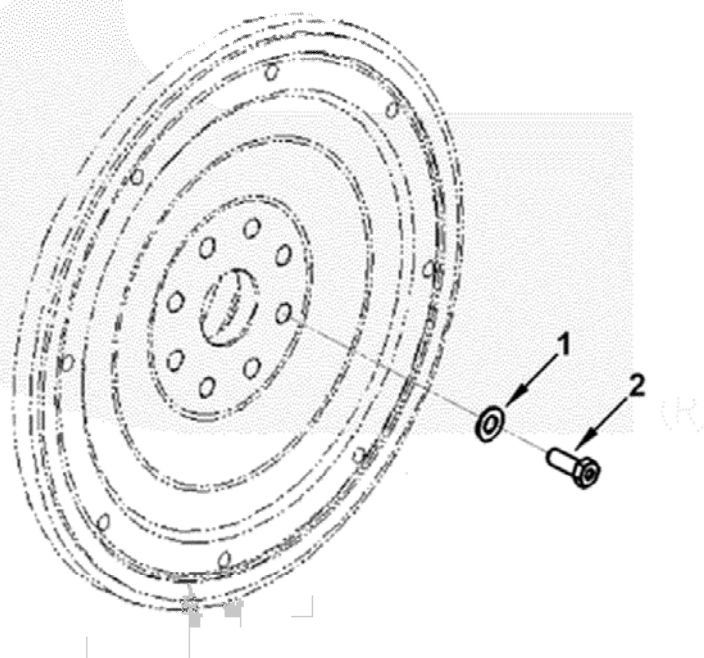

fw952zp

Flywheel Mounting フライホイールマウント

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

 
Flywheel フライホイール

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc

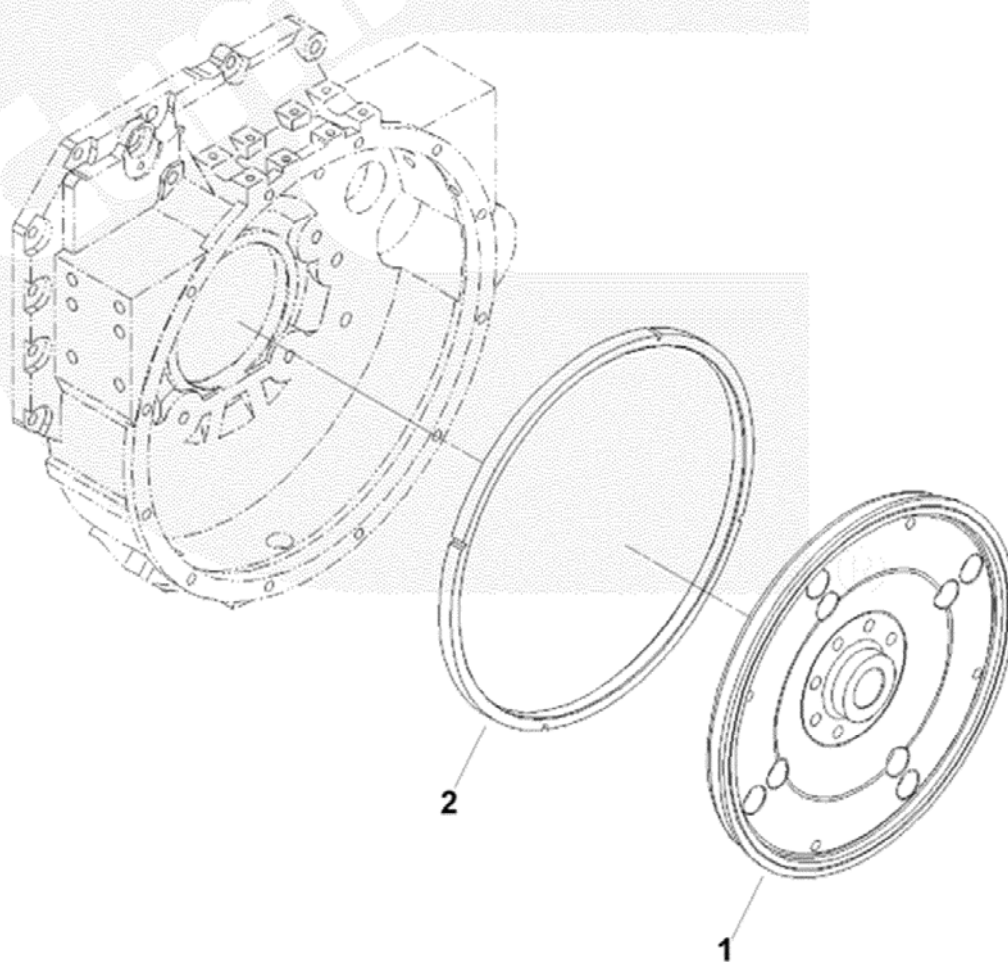

fw954gm

Applicable Model (適用機種): -
Mark (記号): -
Serial No. (適用号機): -

– 66 –

 
Front Gear Cover フロントギヤカバー

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins inc

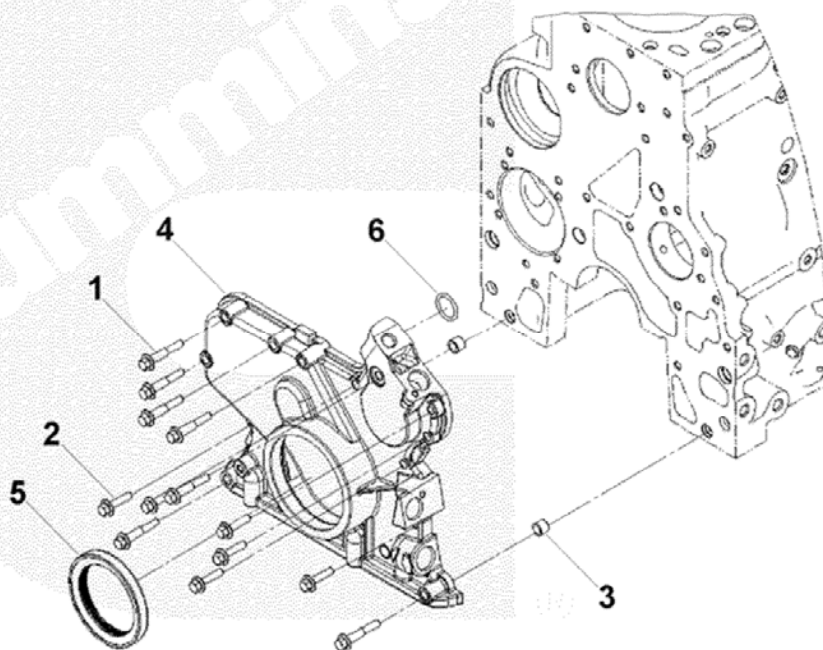

gg942gw

Front Gear Cover
フロントギヤカバー

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

[illegible]

Cabin Heater Plumbing

 
ヒーター配管

Applicable Model (適用機種): -

Mark (記号): -

Serial No. (適用号機): -

©Cummins Inc.

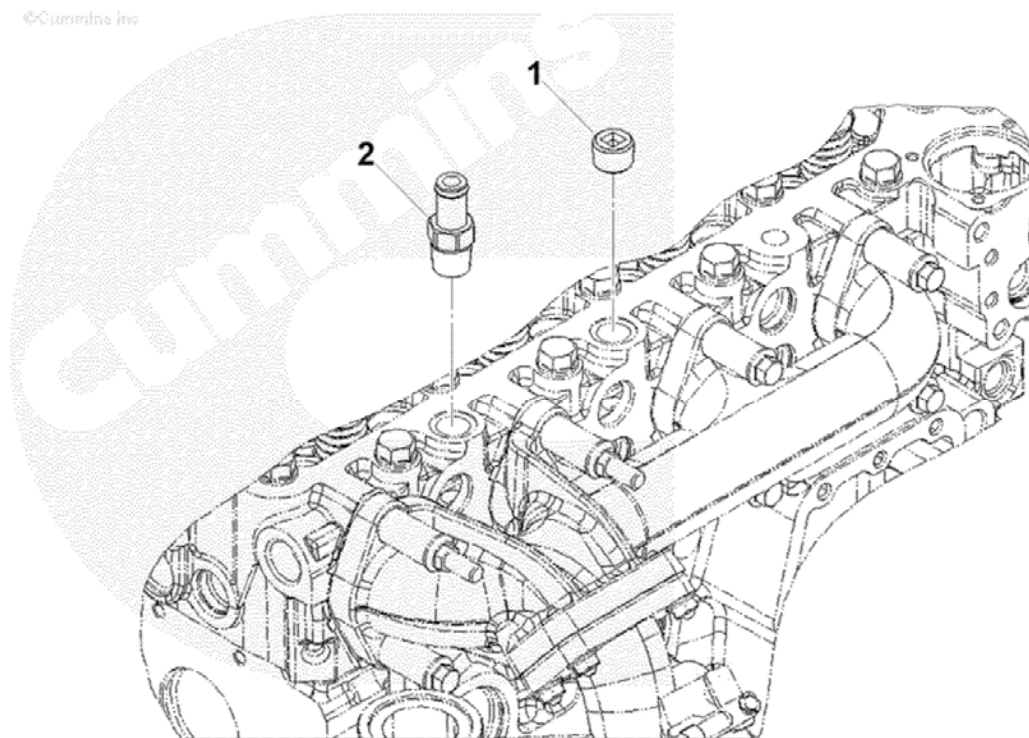

hc905ga

ヒータ配管

Mark (記号): -

Serial No. (適用号機): -

- 70 -